


CHC Navigation Ltd

CGO2 Work Flow – Sync With Controller

Step1: Create one new project

Please refer to [CGO2 Work Flow - Projects](#)

Step2: Open Sync Interface

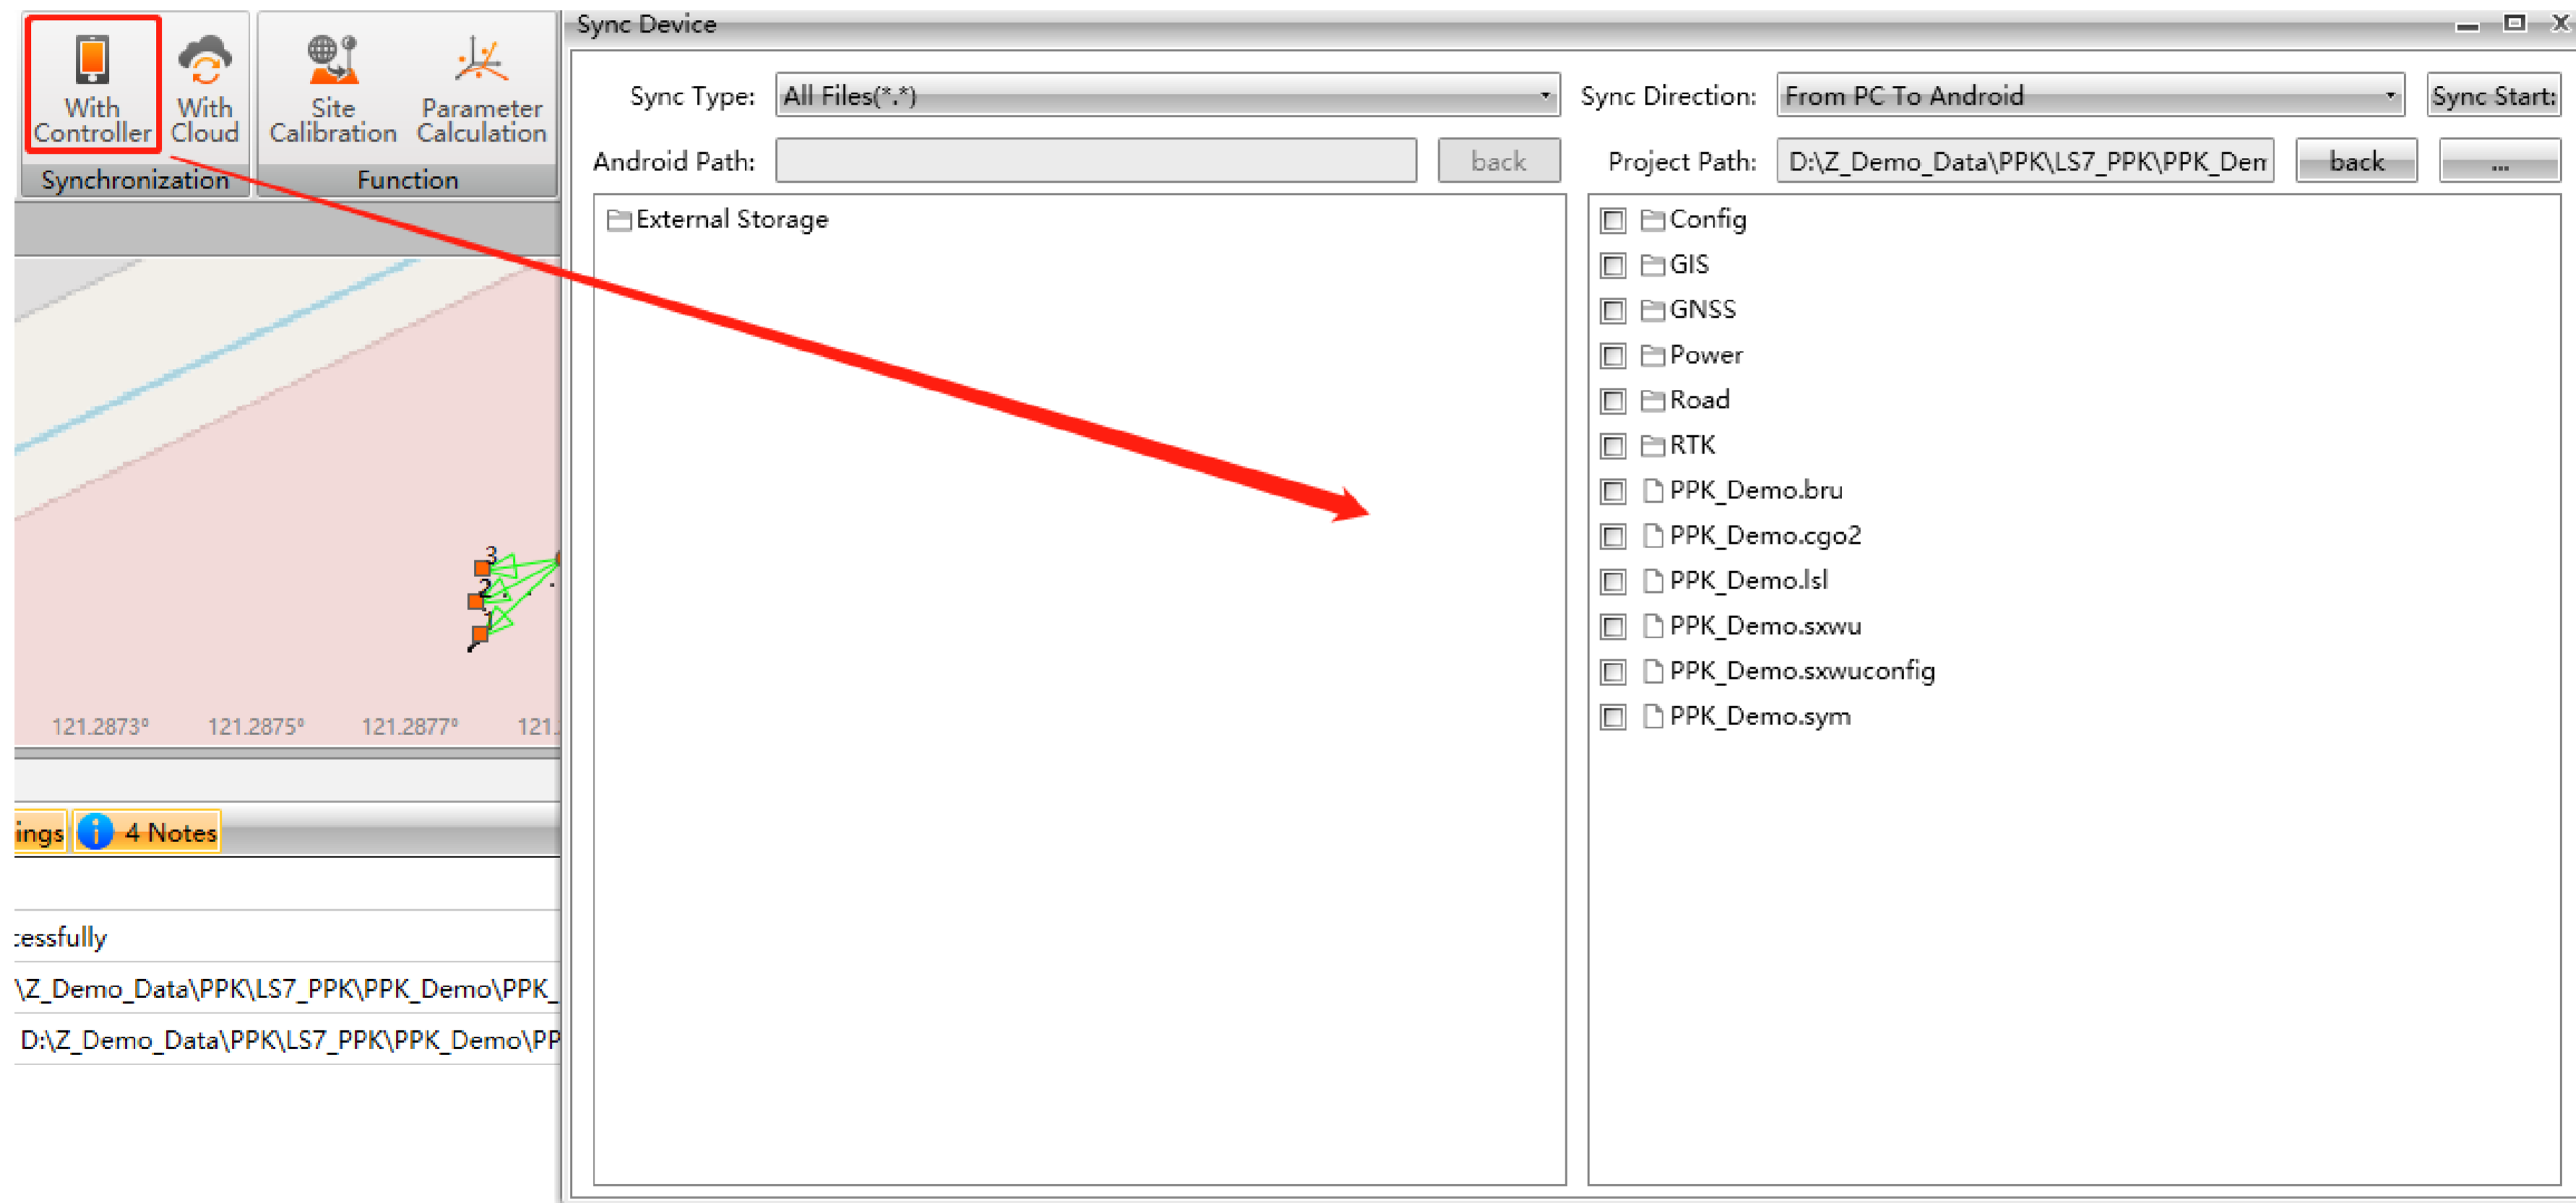


第3步：配置同步参数


1、选择同步文件类型

2、选择同步方向

3、选择本地存放路径

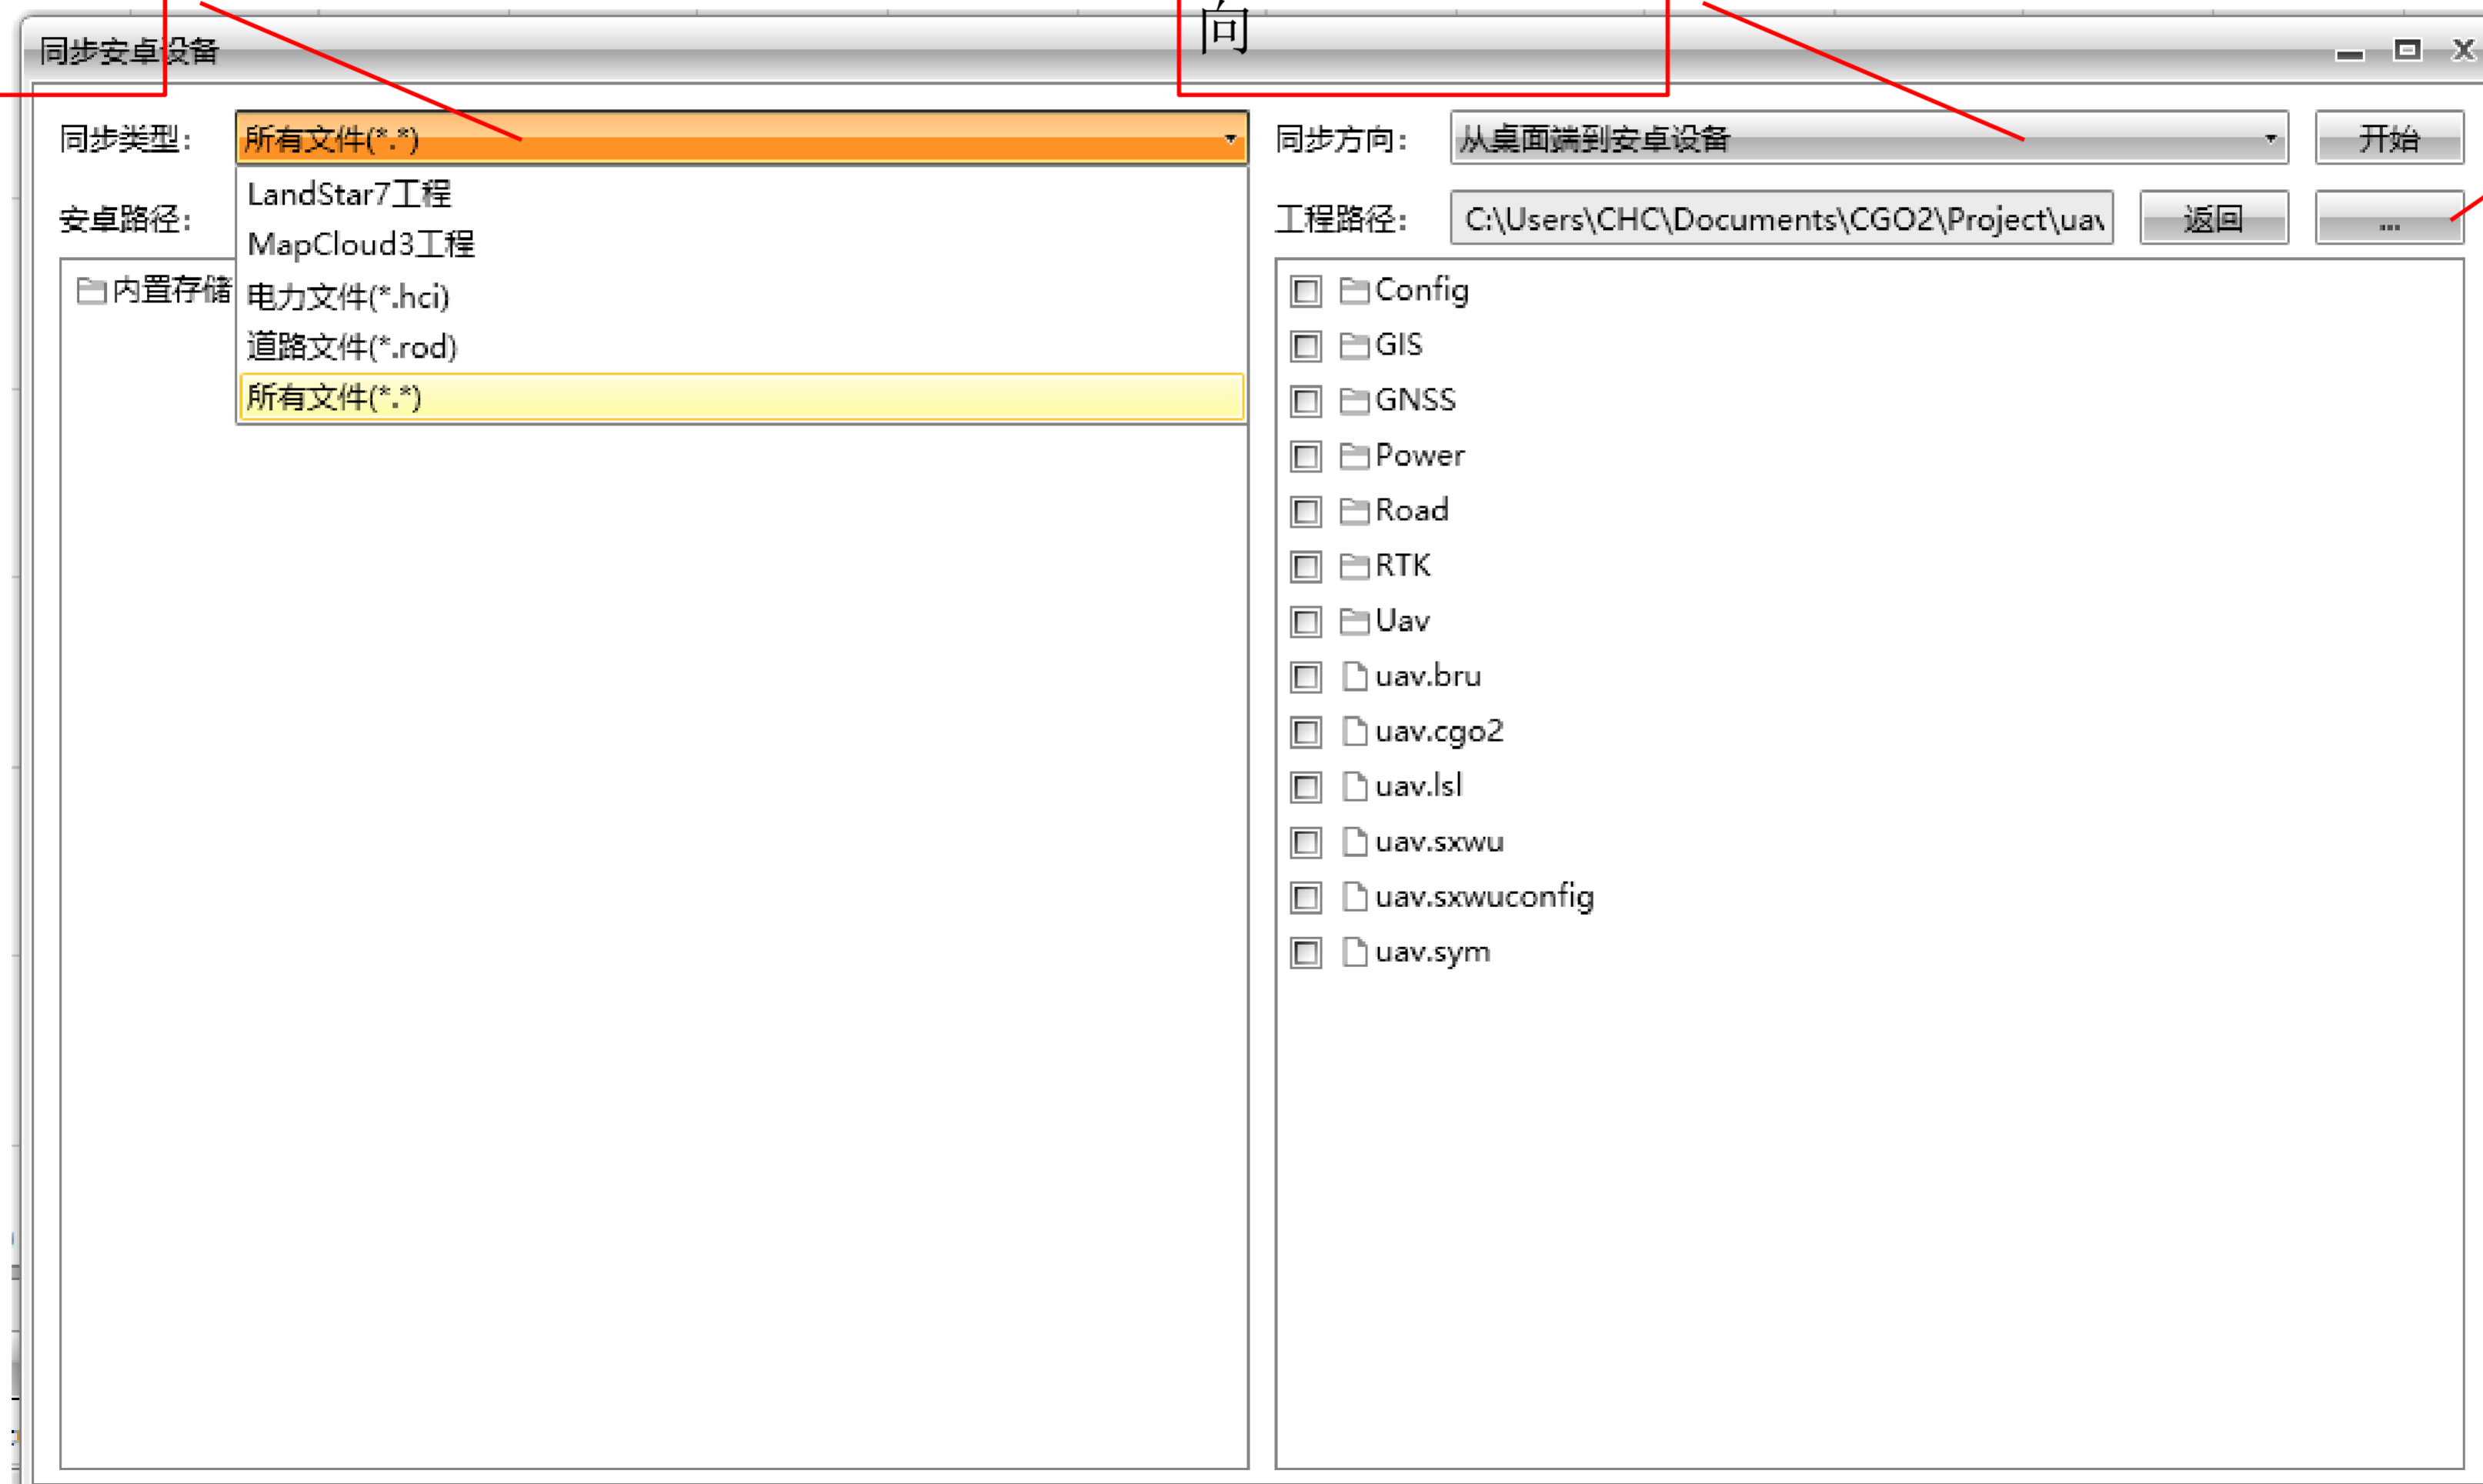

Step4: Sync

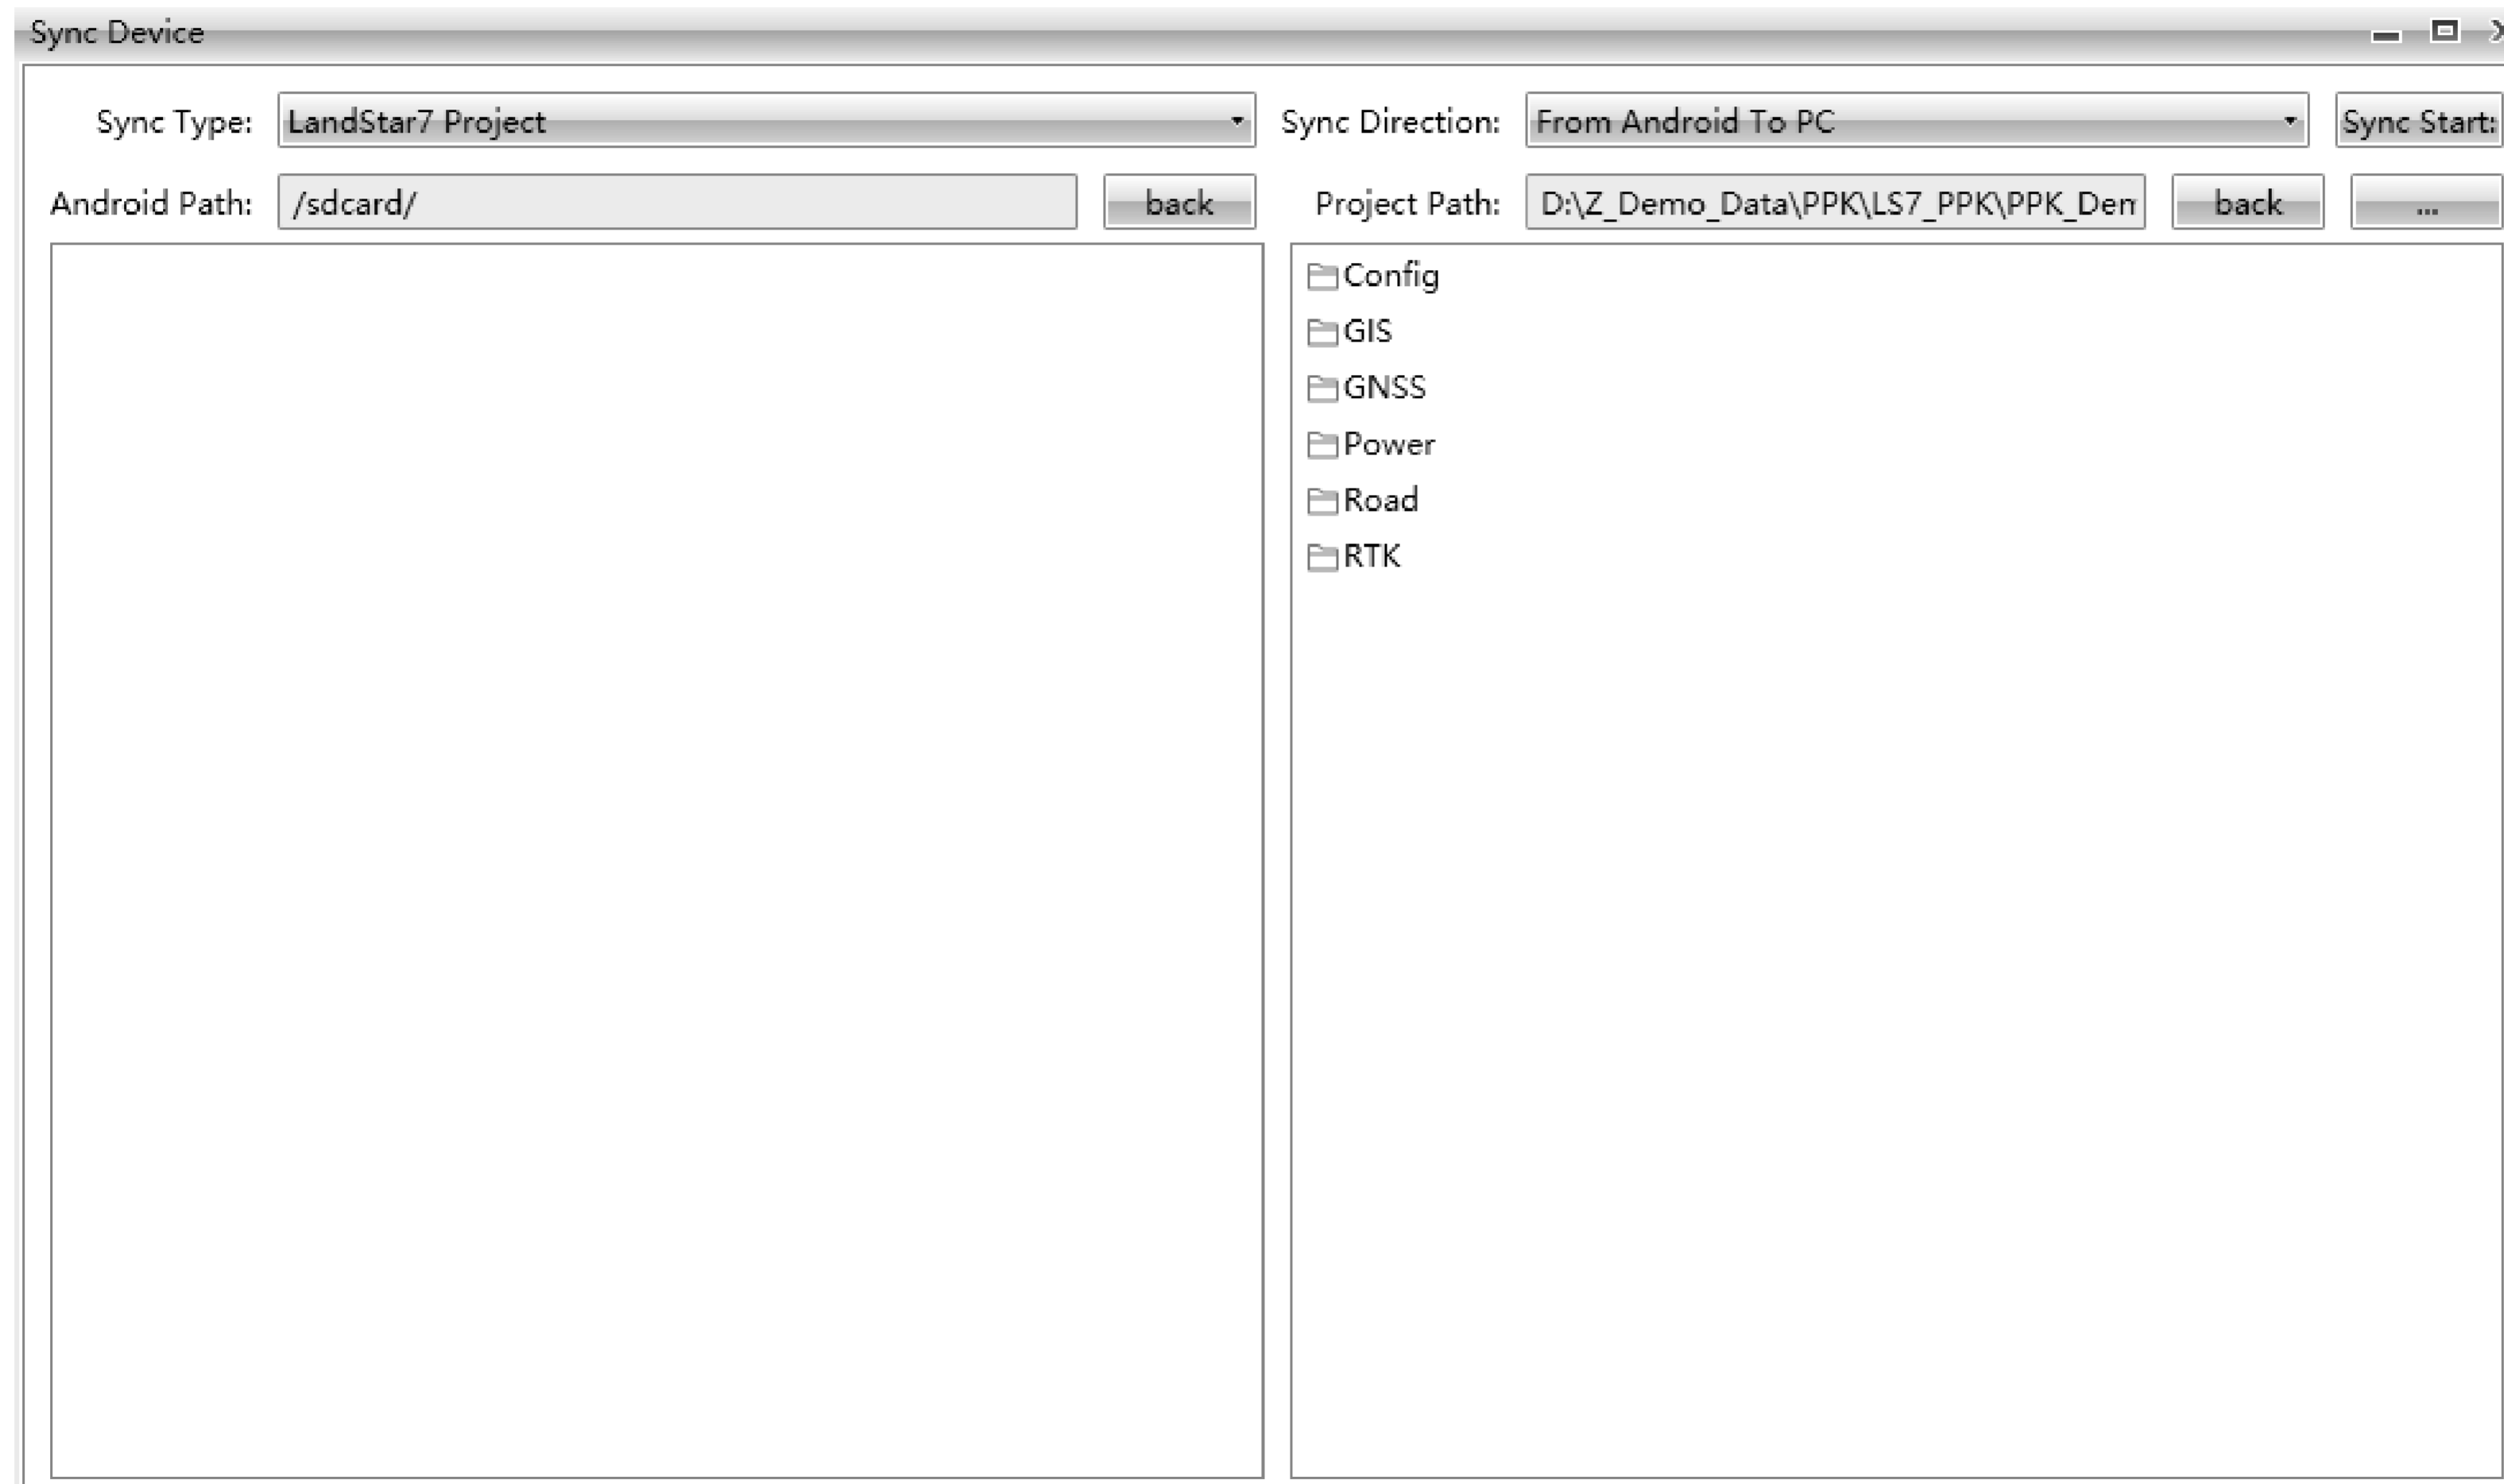

Please note:

Before Sync, please make sure the controller is connected with the PC, and open the USB Debugging function.

In the United States, contact

iGage Mapping Corporation
+1-801-412-0011

www.igage.com/cgo2

For demos, pricing and additional information.

30-day fully functional demos are available by software code.

THANK YOU

CHCNAV

Make your work more efficient