



Updating main firmware in i83.

1. Charge the receiver to at least
2. First download the desired firmware:

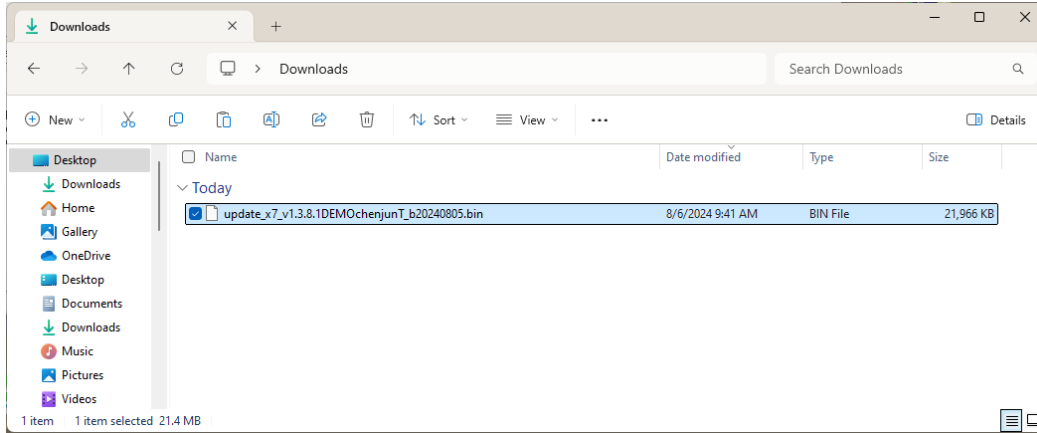


1


3. Connect to the receiver by WiFi:  
Click on the network icon in tool tray (1), then expand the list of available connections (2):

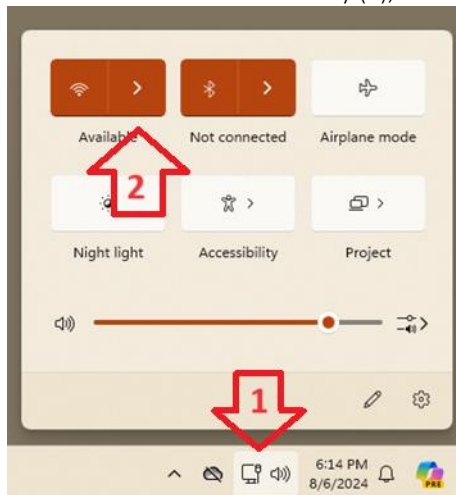


Click on the device with GNSS-serial\_number of your receiver:

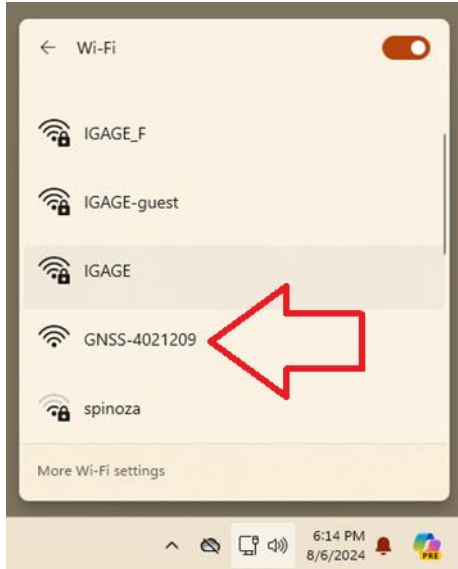

Click on Connect. No password will be required for the i83:

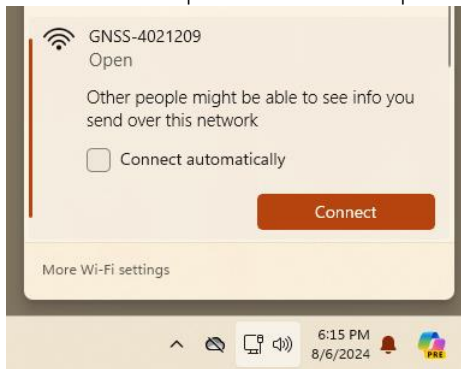


4. Open a browser window and navigate to the address 192.168.1.1:

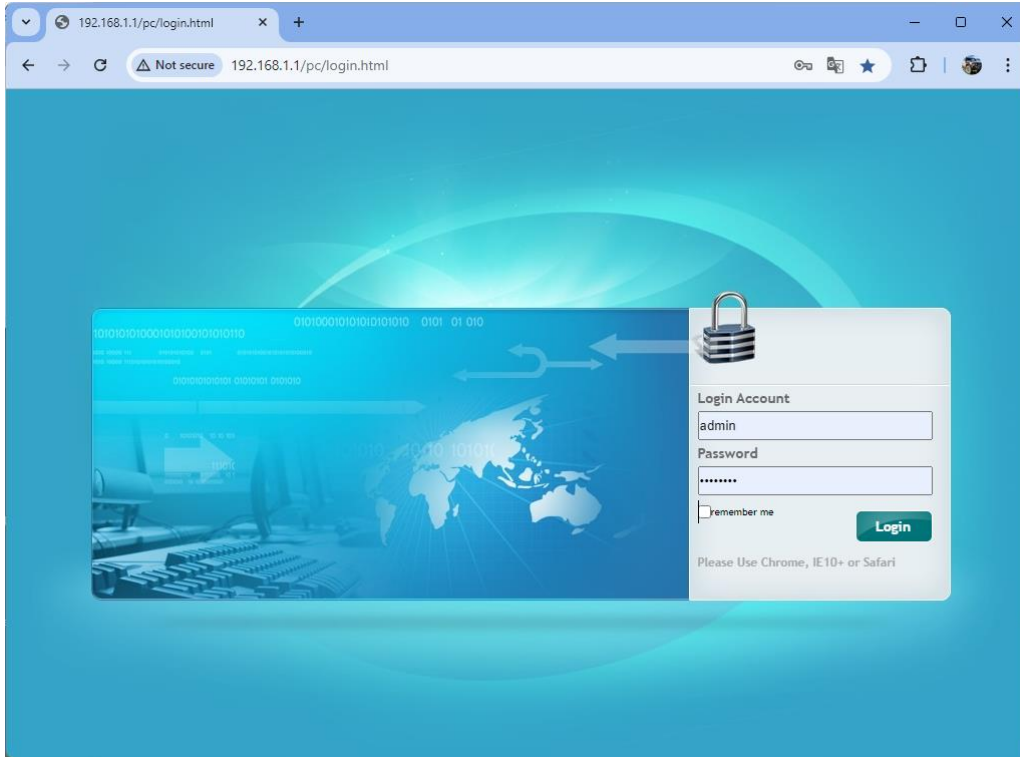


3

The 'Login Account' is 'admin' and the Password is 'password' (lower case). Click Login.

5. Click on Firmware, then 'Firmware info' to see the current firmware version:

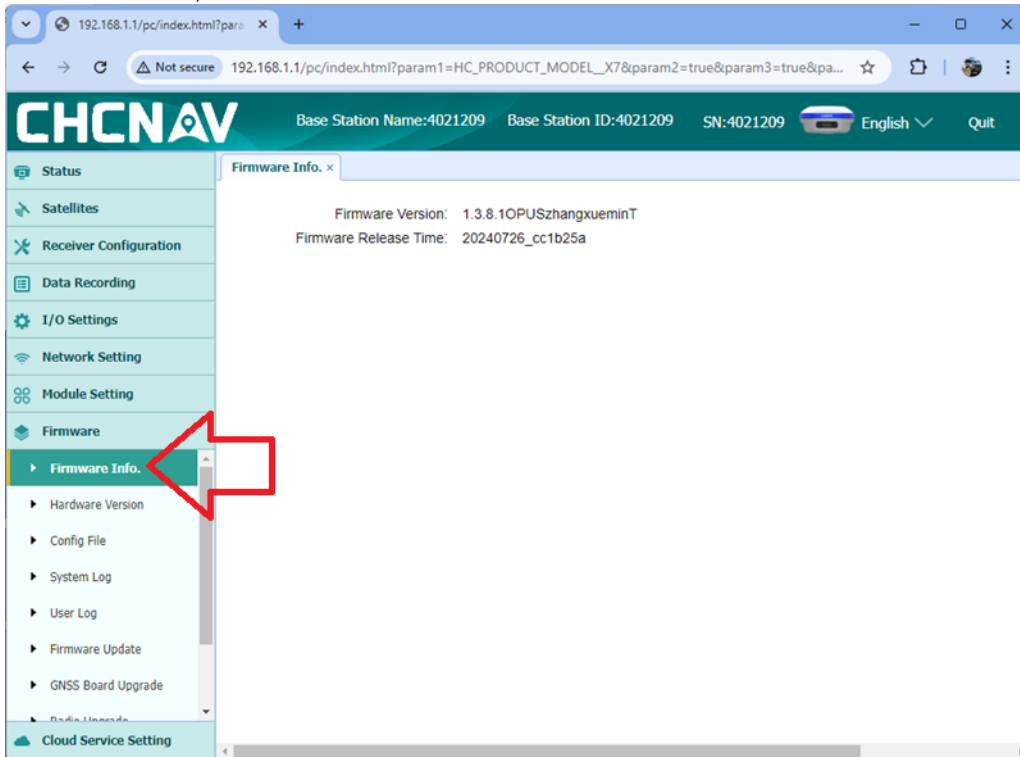


6. Click on 'Firmware Update'

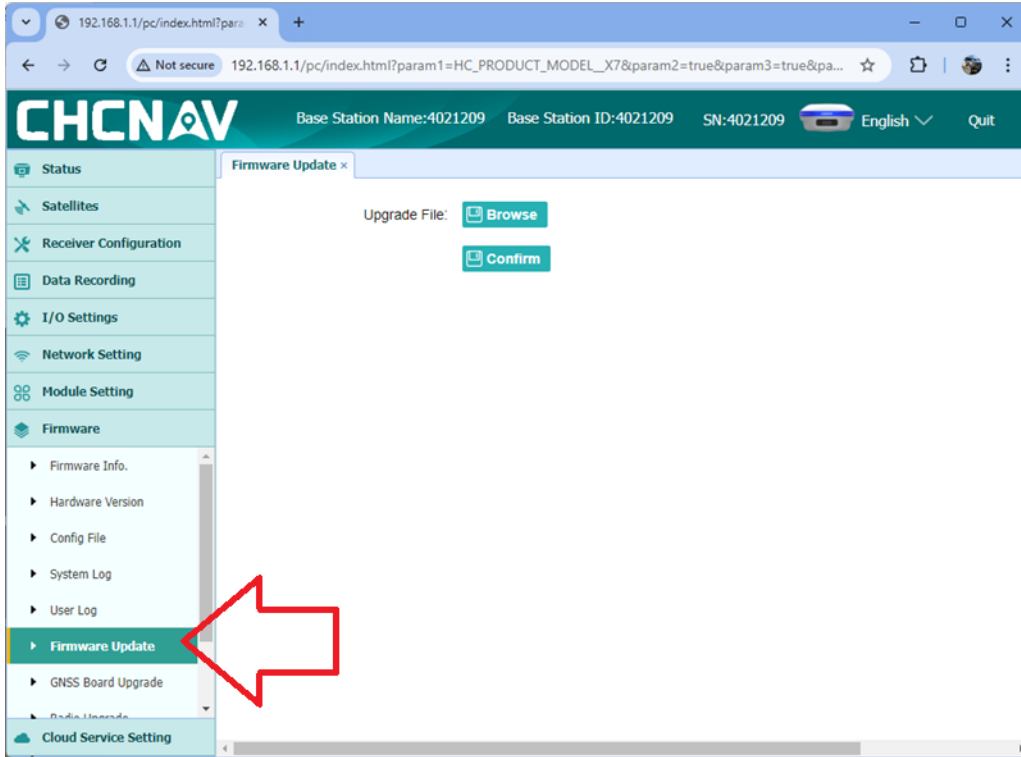


4

Then click on Browse.

7. Select the downloaded firmware file:

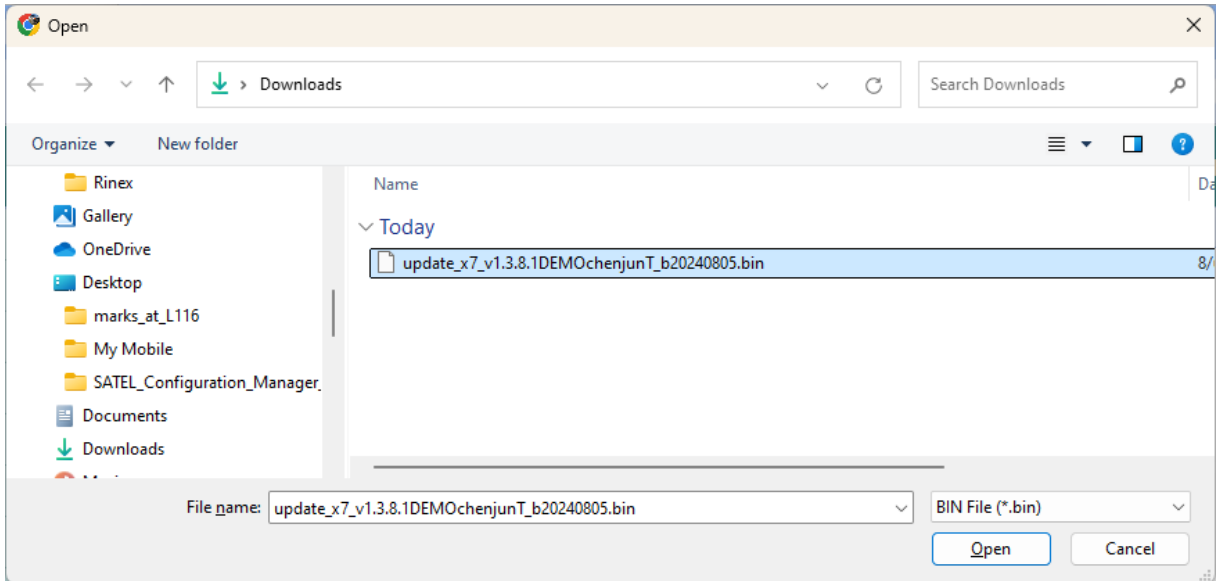


8. Click the Confirm button:

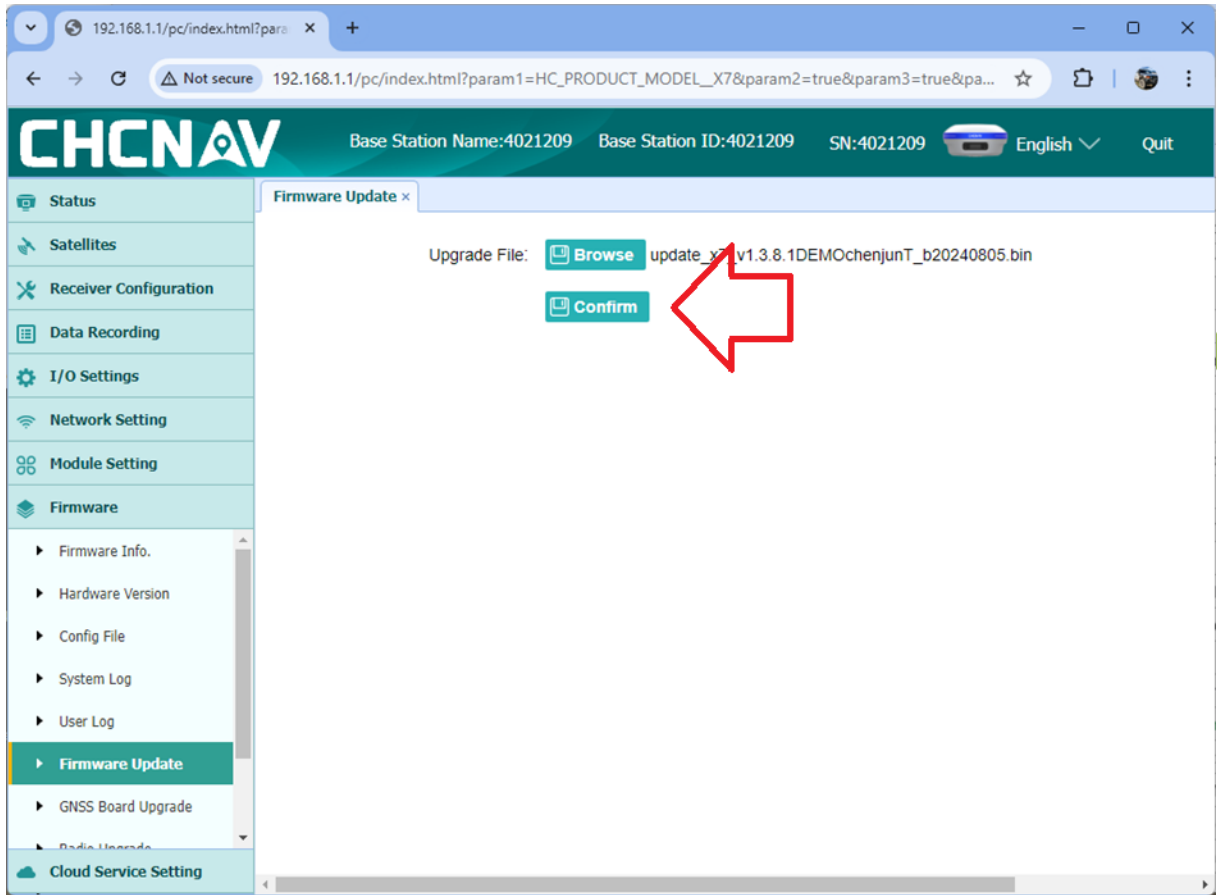

5

The update will take approximately 1 minute 20 seconds to complete.

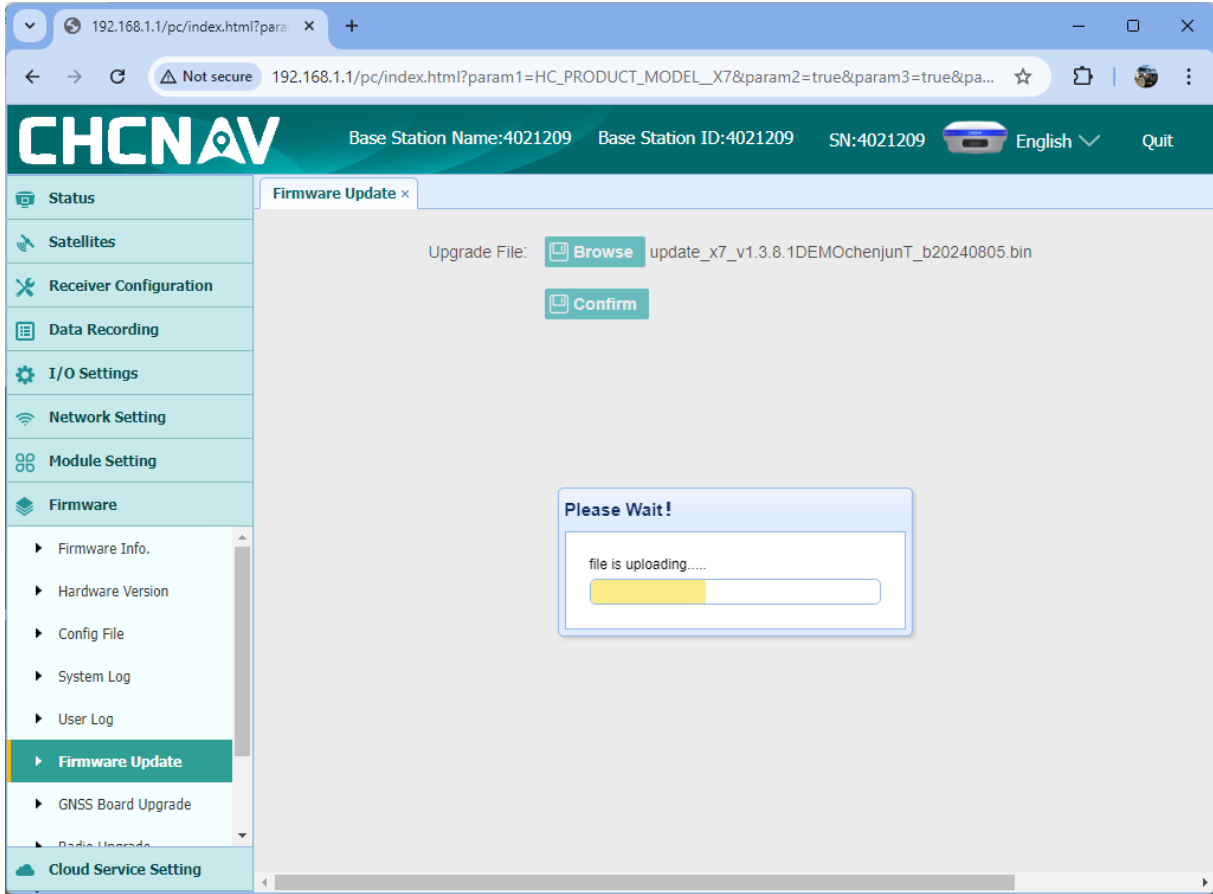

6

When the update is in progress the receiver window will show: Updating...

At the end of the update, the window will show: Update Success for 10 seconds. The receiver will then reboot.