
LandStar 8 2025 Upgrade FAQ

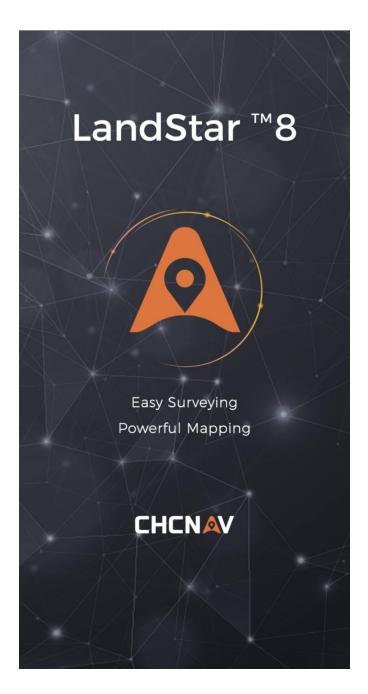

Copyright

19 September 2025; LandStar8.2 Upgrade r0682.docx

Copyright © 2025 iGage Mapping Corporation. All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of iGage Mapping Corporation.

iGage and 'iGage Mapping Corporation' are Trademarks of iGage Mapping Corporation of Salt Lake City Utah, USA. LandStar 8 is a Trademark of CHCNav. All product and brand names mentioned in this publication are trademarks of their respective holders.

Acknowledgements

If you have questions or suggestions, contact us:



iGage Mapping Corporation, 1545 South 1100 East Suite 1, Salt Lake City UT 84105 USA 1-801-412-0011, email: landstar@igage.com

Your input is extremely valuable, and we will listen to your suggestions!

Important Documentation Note



If you purchased LandStar 8 and equipment from iGage, you are entitled to upgrade your printed User Manual.

This link explains how to get a complementary or reasonably priced User Manual update:



https://igage.com/LS8/LS820225UM.htm

Considering purchasing equipment or LandStar elsewhere?

iGage will not support or service equipment and software that we do not sell. It is not possible to purchase equipment elsewhere and then pay for iGage support.

If you are considering purchasing LandStar 8, CHCNav, GeoMate or eFIX equipment elsewhere make sure the vendor can provide you with all the support that you will need. The fact that you are reading this iGage FAQ is a warning sign that your vendor is incapable of providing the long-term support you need.

How to Upgrade LandStar

Download and install LandStar8 from the iGage website

Make sure your field controller is connected to the internet by Wi-Fi or has cellular data enabled.

To directly download the Latest version, scan and open this QR code on your field controller:



 
The web viewer on your field controller will open and a file listing will be shown:




The .apk file in this folder is the installer file.

Click on the APK.

The file will begin to download:



After the file downloads::

 


Click on Open.

The Android operating system will ask:




Click Update.

 Then wait while LandStar is installed and deployed.



 Finally, when the installation process has completed:



Click on Open.



Service Agreement Privacy Policy

LandStar Software License and Service Agreement

Welcome to the LandStar software and its related Services!

LandStar Software License and Service Agreement ("Agreement") is a legally binding contract entered into between you (or "User and Shanghai Navigation Europe Kft and its affiliates ("CHCNAV" or "we") regarding the use of the LandStar mobile application ("Software") and any associated devices used in connection with this Software (including but not limited to receivers, total stations, etc., collectively referred to as "Devices"). It applies to your downloading, installation, and use of this Software and related Services.

Before using this Software and related Services, please carefully read and fully


Remind me every time

Exit lagree

Click I agree to continue.


Update the USA Localization package

Click the Blue guy (top left corner):

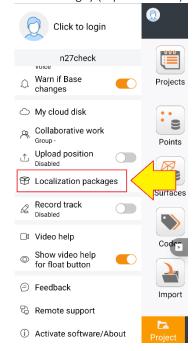

Click on Localization package.


Wait for list to load / update.

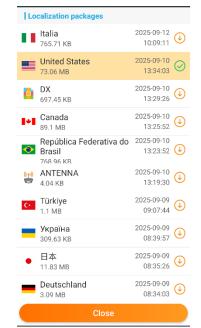

Click on the appropriate country: United States.



 Click Yes.



It will take several minutes to download the package. The package contains special projection zones, GEOIDS and initial local settings and triggers many of the new features.

After the download and installation is complete, a green checkmark will display next to the package.



Click Close (at the bottom) to return to the main menu.


8.1 to 8.2 Suggestions

There are thousands of changes in 8.2 from 8.1. See:

https://igage.com/out/LandStarDistribution/LatestVersion/VersionInformation ReadMe.pdf


for a partial list.

Many have been introduced incrementally over the last year. Most are intuitive and will require no planning, but there are a few big changes that you will want to consciously prepare for. Click on the Blue Guy, then Software settings:

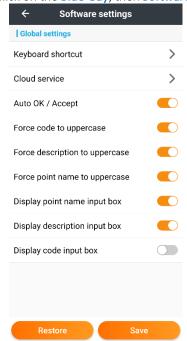


Enable the Display description input box, if you don't want to use Codes, disable Display code input box.

When you import points from a text file, switch to using the USA: PN,N,E,Z,D format. This will treat your descriptions as descriptions instead of codes:

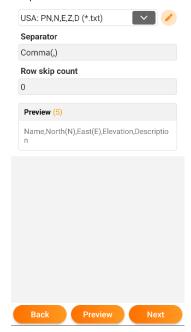

When you export, use a format that includes the description:

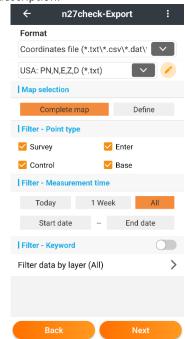

Remember that it is also possible to combine Code and Description into a single delimited item when exporting:

