

# How to pair network bridge with boat

## Technical FAQ



USV | Nov 2023

## Prerequisites:

### Hardware:

1. Network bridge
2. PC
3. Apache boat

### Steps:

1. Change PC ip address setting to 192.168.1.x range:

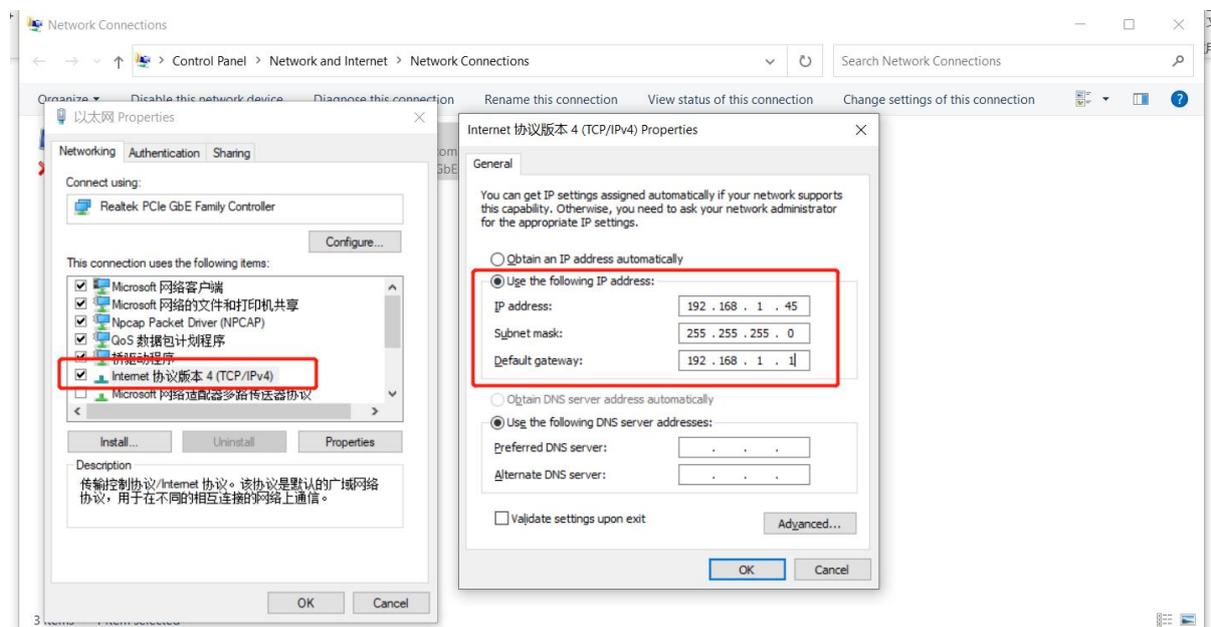


Figure 1

2. Open browser, enter 192.168.1.20.

User Name: ubnt; Password: ubnt; Country:Licensed; Language:English

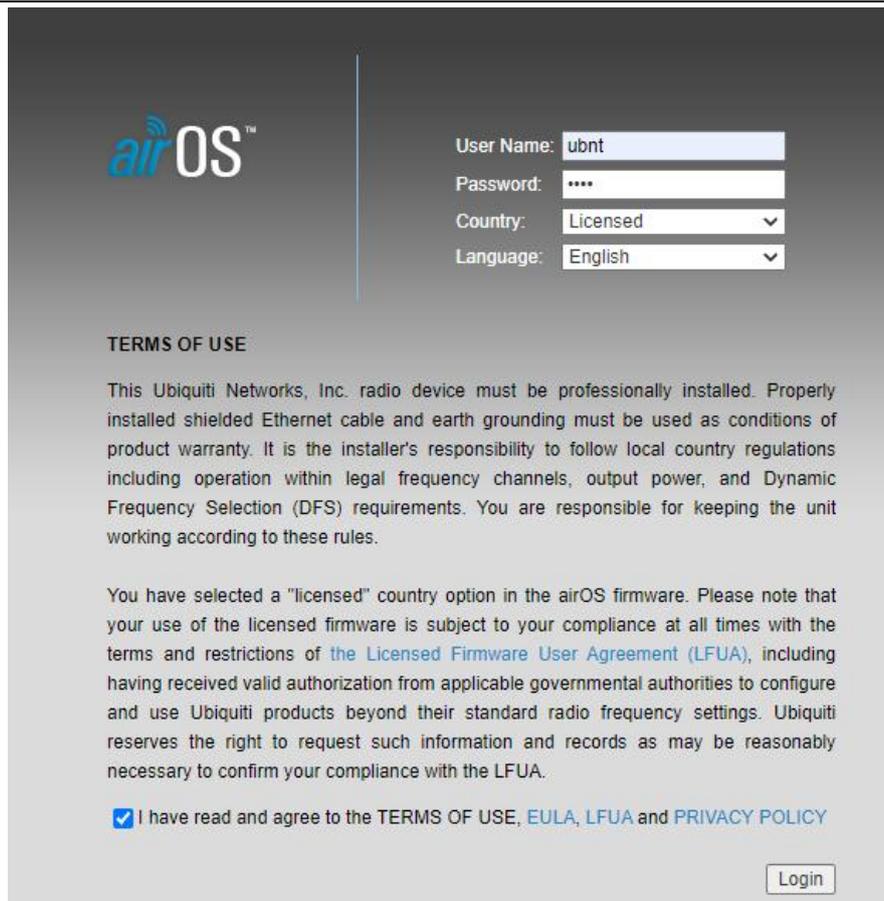


Figure 2

3. Upload the config file in System page. Please ask the config file from Support engineer. Then the network bridge will restart.

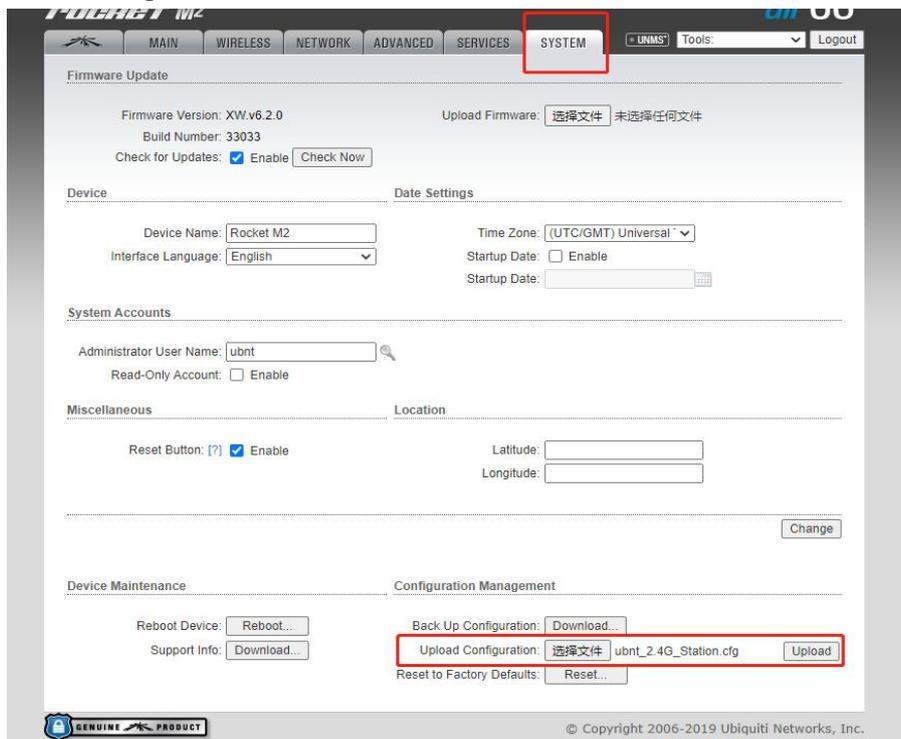


Figure 3

4. Change PC ip to 192.168.53.x range.

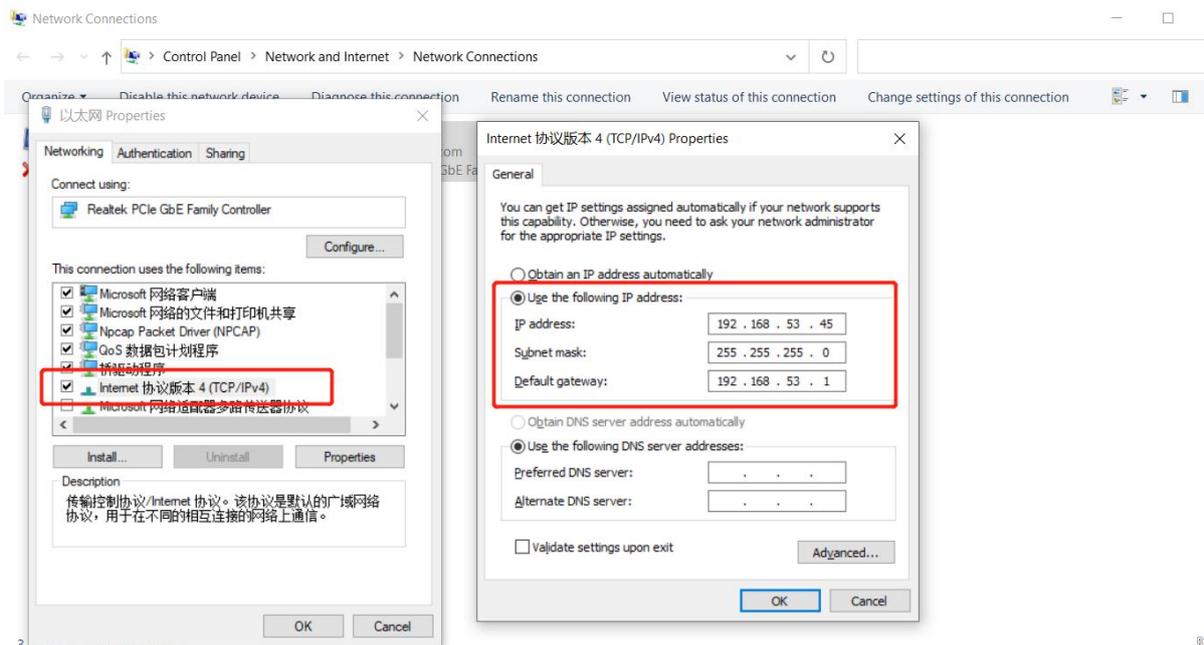


Figure 4

5. Open browser and enter 192.168.53.19

User Name: admin; Password: Admin1234

6. In WIRELESS menu, select the APACHE wifi and save the setting. Then the network bridge signal LED will start to blink.

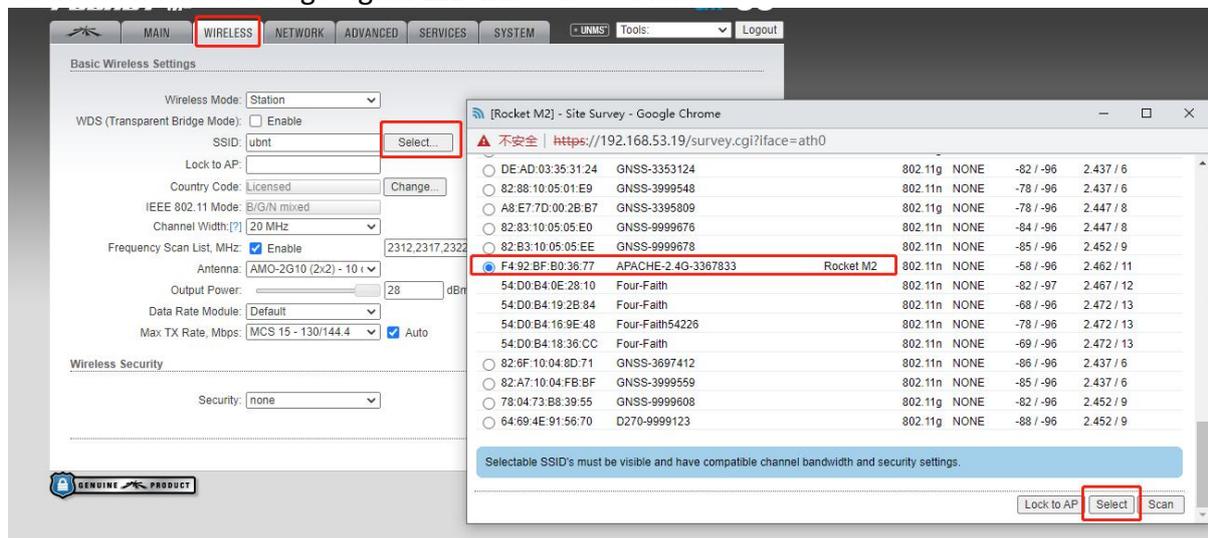


Figure 5

Tip:

1. If you want to reset the network bridge, please find some fine needle. Long press this button: If you want to reset the network bridge, please find some fine needle. Long press this button:



Figure 6

2. All LED is on means the reset finished.



Figure 7

**CHC Navigation**

Shanghai Huace Navigation Technology Ltd.

CHCNAV | Smart Navigation & Geo-Spatial Technology

Park,

577 Songying Road, 201703, Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963

Email: [sales@chcnav.com](mailto:sales@chcnav.com) | [support@chcnav.com](mailto:support@chcnav.com)

Skype: [chcnav\\_support](https://www.skype.com/people/chcnav_support)

Website: [www.chcnav.com](http://www.chcnav.com)