



CHCNAV i76 GNSS

User Guide



Survey & Engineering | Mar 2025

Table of Content

Table of Content	2
Preface	5
Copyright	5
Copyright 2025	5
Trademarks	5
Safety Warnings	5
FCC Statement	5
CE Interference Statement	6
Brazil	6
Conformity to Japanese regulations	6
1. Introduction	7
1.1 Safety Information	7
1.2 Regulations and Safety	7
1.2.1 Use and Care	7
1.3 Technical Support	8
1.4 Disclaimer	8
1.5 Your Comments	8
2. Getting Started with I76	9
2.1 About the Receiver	9
2.2 Parts of the Receiver	9
2.2.1 Front Panel	9
2.2.2 Lower Housing	10
2.2.3 Receiver Ports	11
2.3 Batteries and Power	11
2.3.1 Batteries	11
2.3.2 The Internal Battery	11
2.3.3 Battery Safe	11
2.4 Product Basic Supply Accessories	13
2.4.1 Base Kit Basic Supply	13
2.4.2 Rover Kit Basic Supply	14
2.5 Connecting to an Office Computer	14
2.6 Connecting to a Controller	15
2.6.1 Connecting via Bluetooth with LandStar Software	15
2.7 Downloading Logged Data	16
2.7.1 USB Download	16
3. Equipment Setup and Operation	18
3.1 Base Station Setup	18
3.2 Rover Station Setup	19
3.3 Working with the Tilt Compensation	20
3.3.1 Operation Steps for first IMU initialization	20

3.3.2 Notes of using tilt measurement	22
4. Configuring Through a Web Browser	23
4.1 Status Menu	24
4.1.1 Position Submenu	24
4.1.2 Activity Submenu	25
4.1.3 Google Map Submenu	25
4.2 Satellites Menu	25
4.2.1 Tracking Table Submenu	26
4.2.2 Tracking Info. Table Submenu	26
4.2.3 Tracking Skyplot Submenu	27
4.2.4 Satellite Activation Submenu	27
4.3 Receiver Configuration Menu	28
4.3.1 Description	28
4.3.2 Antenna Configuration Submenu	29
4.3.3 Reference Station Settings Submenu	29
4.3.4 Receiver Reset Submenu	31
4.3.5 Languages Submenu	31
4.3.6 User Management Submenu	31
4.4 Data Recording Menu	31
4.4.1 Log Settings Submenu	32
4.4.2 FTP Push Settings Submenu	34
4.4.3 FTP Push Log Submenu	34
4.4.4 Data Download Submenu	34
4.5 IO Settings Menu	35
4.5.1 IO Settings Submenu	36
4.6 Network Setting Menu	39
4.6.1 Email Alarm Submenu	40
4.6.2 HTTP Submenu	40
4.6.3 HTTPS Submenu	40
4.6.4 FTP Service Submenu	41
4.7 Module Setting Menu	41
4.7.1 Description Submenu	41
4.7.2 WiFi Submenu	42
4.7.3 Bluetooth Settings Submenu	42
4.7.4 Radio Settings Submenu	42
4.7.5 IMU Setting	43
4.8 Firmware Menu	43
4.8.1 Firmware Info Submenu	44
4.8.2 Hardware Version Submenu	44
4.8.3 Config File Submenu	44
4.8.4 System Log Download Submenu	45
4.8.5 User Log Submenu	45

4.8.6 Firmware Update Submenu	45
4.8.7 GNSS Board Upgrade Submenu	46
4.8.8 GNSS Registration Submenu	46

Preface

Copyright

Copyright 2025

CHCNAV | CHC Navigation Technology Ltd. All rights reserved. The CHCNAV are trademark of CHC Navigation Technology Limited. All other trademarks are the property of their respective owners.

Trademarks

All product and brand names mentioned in this publication are trademarks of their respective holders.

Safety Warnings

GNSS (Global Navigation Satellite System) receivers are electronic devices that use signals from satellites to determine location, speed, and time. While GNSS receivers are generally safe to use, there are some safety considerations that users should keep in mind:

Do not rely solely on GNSS for navigation: GNSS signals can be disrupted by various factors such as tall buildings, trees, and bad weather. It is important to use other navigation aids such as maps, compasses, and visual landmarks.

Keep GNSS receivers away from other electronic devices: Electronic devices such as mobile phones, radios, and computers can emit electromagnetic interference (EMI) that can disrupt GNSS signals. Keep GNSS receivers away from such devices to avoid EMI.

Do not tamper with GNSS receivers: Tampering with GNSS receivers or modifying their software can cause them to malfunction or produce inaccurate readings. Only use GNSS receivers that are certified and authorized for use.

Follow manufacturer instructions: Follow the manufacturer's instructions regarding the safe use and handling of GNSS receivers. This includes instructions for charging, cleaning, and storing the device.

Dispose of GNSS receivers properly: When disposing of GNSS receivers, follow local regulations for electronic waste disposal to avoid harming the environment.

It is important to use GNSS receivers safely to avoid accidents or injury. If you experience any issues or concerns with your GNSS receiver, contact the manufacturer or a qualified technician for assistance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Interference Statement

Declaration of Conformity: Hereby, CHC Navigation declares that this i76 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of conformity can be found at CHC Navigation Technology Ltd.



Brazil

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL-www.anatel.gov.br.

Conformity to Japanese regulations

Japanese Radio Law and Japanese Telecommunications Business Law Compliance.

This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.

This device should not be modified (otherwise the granted designation number will become invalid).

1. Introduction

The i76 GNSS Receiver User Guide describes how to set up and use the CHCNAV i76 GNSS receiver. In this manual, “the receiver” refers to the i76 GNSS receiver unless otherwise stated. Even if you have used other Global Navigation Satellite Systems (GNSS) products before, CHCNAV recommends that you spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, go to www.chcnave.com for an interactive look at CHCNAV and GNSS.

1.1 Safety Information

An absence of specific alerts does not mean that there are no safety risks involved.

A Warning or Caution information is intended to minimize the risk of personal injury and/or damage to the equipment.



WARNING - A Warning alerts you to a potential misused or wrong setting of the equipment.



CAUTION - A Caution alerts you to a possible risk of serious injury to your person and/or damage to the equipment.

1.2 Regulations and Safety

The receivers contain a built-in wireless modem for signal communication through Bluetooth wireless technology or through external communication data link. Regulations regarding the use of the wireless modem vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. However, in some countries, the administrative permissions are required. For license information, consult your local dealer. Bluetooth® operates in license-free bands.

Before operating a i76 GNSS receiver, determine if authorization or a license to operate the unit is required in your country. It is the responsibility of the end-user to obtain an operator's permit or license for the receiver for the location or country of use.

1.2.1 Use and Care

This receiver is designed to withstand the rough environment that typically occurs in the field. However, the receiver is high-precision electronic equipment and should be treated with reasonable care.



CAUTION - Operating or storing the receiver outside the specified temperature range will cause irreversible damage.

1.3 Technical Support

If you have a problem and cannot find the information you need in this manual or CHCNAV website (www.chcnave.com), contact your local CHCNAV dealer from which you purchased the receiver(s).

If you need to contact CHCNAV technical support, please contact us by email (support@chcnave.com) or Skype (chc_support).

1.4 Disclaimer

Before using the receiver, please make sure that you have read and understood this User Guide, as well as the safety information. CHCNAV holds no responsibility for the wrong operation by users and for the losses incurred by the wrong understanding about this User Guide. However, CHCNAV reserves the rights to update and optimize the contents in this guide regularly. Please contact your local CHCNAV dealer for new information.

1.5 Your Comments

Your feedback about this user guide will help us to improve it in future revision. Please email your comments to support@chcnave.com.

2. Getting Started with I76

2.1 About the Receiver

The new CHCNAV i76 GNSS receiver offers integrated IMU-RTK technology to provide a robust and accurate GNSS positioning in any circumstances. Unlike the standard MEMS based GNSS receivers, the i76 GNSS IMU-RTK combines state-of-the-art GNSS RTK engine, calibration-free professional IMU sensor and advanced GNSS tracking capabilities. Survey projects are achieved with high productivity and reliability pushing the boundaries of conventional GNSS RTK survey.

2 Premium cameras enable Visual Stakeout. Bluetooth and Wi-Fi technology provides cable-free communication between the receiver and controller.

The receiver can be used as the part of an RTK GNSS system with CHCNAV LandStar software. Moreover, user can download the GNSS data that recorded in the internal memory of receiver to a computer.

To configure the receiver for performing a wide variety of functions, you can use the web interface by connecting the receiver with PC or smartphone through Wi-Fi.

2.2 Parts of the Receiver


Power Button is located on the front panel. SMA port and USB Type-C port are located on the bottom of the unit.

2.2.1 Front Panel

The following figure shows a front view of the receiver.



The front panel contains two indicator LEDs and one buttons.

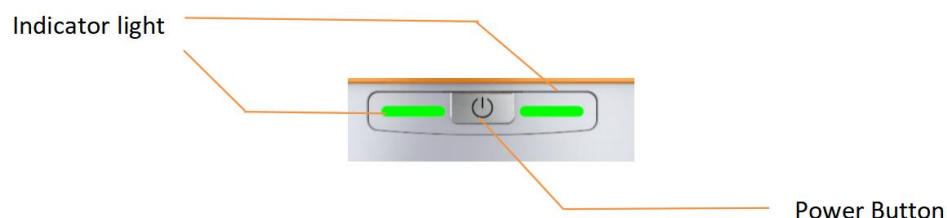



Name	Description
Indicator light	<ul style="list-style-type: none"> ✓ Indicates whether the receiver is transmitting/receiving differential data. <ul style="list-style-type: none"> •As a Base station: successfully transmitting differential data, flash yellow light. •As a Rover station: tracking satellites will flash red light, successfully receiving differential data from Base station will flash yellow light when it is single or float, flash green light when it is fixed. ✓ Shows the number of satellites that the receiver has tracked. <ul style="list-style-type: none"> •When the receiver is searching for satellites, the red LED flashes once every 5 seconds. •When the receiver tracks N satellites, the red LED blinks N times per second, pauses for 5 seconds, and then blinks N times again. ✓ Indicated charging status <ul style="list-style-type: none"> •The power light shows yellow when charging •The power light shows green when fully charged
Power Button (Yellow/Green)	<ul style="list-style-type: none"> •Press and hold 3s to turn on or off;

2.2.2 Lower Housing

The lower housing contains one SMA port, one USB Type-C communication.



2.2.3 Receiver Ports

Port	Name	Description
	USB Type-C port	<ul style="list-style-type: none"> • This port is a type-C USB connector that supports USB communications. • Users can use USB Cable supplied with the system to download the logged data to a computer but can't upload the data. • USB port can be used to charge the i76 GNSS receiver.
	SMA port	<ul style="list-style-type: none"> • Connect a radio antenna to internal radio of the receiver. And this connector is not used if you are using an external radio.


2.3 Batteries and Power

2.3.1 Batteries

The receiver has a built-in non-removable Lithium-ion battery.

2.3.2 The Internal Battery


The rechargeable Lithium-ion battery is supplied partially charged.

 **WARNING** – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
- Charge the Lithium-ion battery only in a CHCNAV product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.
- Use the battery only in CHCNAV equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

2.3.3 Battery Safe

 **WARNING** – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to discoloration, warping, and leaking battery fluid.

- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle under hot weather condition.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



WARNING – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive and contact with it can result in personal injury and/or property damage.


To prevent injury or damage:

- If the battery leaks, avoid with the battery fluid.
- If battery fluid gets into your eyes, immediately rinses your eyes with clean water and seek medical attention. Please do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.

2.4 Product Basic Supply Accessories

2.4.1 Base Kit Basic Supply

Item	Picture
I76 GNSS Receiver	
SMA Whip Antenna(410-470MHz)	
Power Adapter	
USB Type-C	
H.I. Tape	
Extension pole(30cm)	
Tribrach with optical plummet	
Auxiliary H.I. Tool	
Transport Hard Case	

Tribrach Adaptor	
------------------	---


2.4.2 Rover Kit Basic Supply

Item	Picture
I76 GNSS Receiver	
SMA Whip Antenna(410-470MHz)	
Power Adapter	
USB Type-C	
Range Pole (AR)	
Auxiliary H.I. Tool	
Transport Hard Case	

2.5 Connecting to an Office Computer

The receiver can be connected to an office computer via a USB Type-C port for serial data transfer. Make sure the receiver is turned on before connecting to your office computer.

The following figure shows how to connect to the computer for serial data transfer or settings:

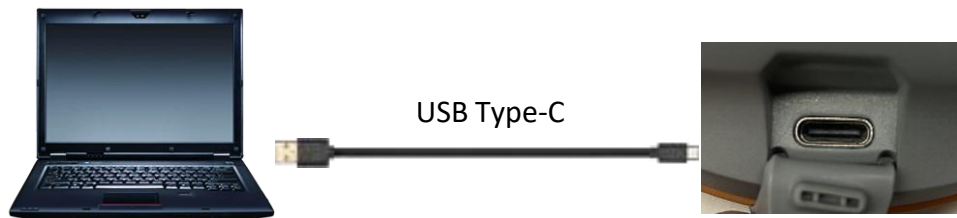

2.6 Connecting to a Controller


2.6.1 Connecting via Bluetooth with LandStar Software

Turn on the controller → run LandStar → go to Config main menu → tap Connect.


In the Connect screen, select CHC for the Manufacture field, i76 for Device Type field, Bluetooth for Connection Type field.

Connect instrument		
GNSS	TS	Peripheral
Brand	CHC	▼
Type	RTK	▼
Model	i76	▼
Contact type	Bluetooth	▼
Antenna type	CHC i76 NONE	>
<div> <div>Target</div> <div>Search</div> </div>		
GNSS-3719740		✓
GNSS-3689191		○
GNSS-3513841		○
Connect		

Tap the Bluetooth Manager and turn on the Bluetooth function to search Bluetooth device around → select the target device in the list → Tap back button → select the target device in the Bluetooth manager list.

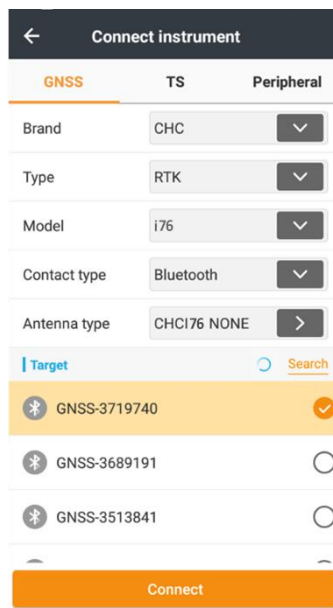

Tap the Connect button to build the connection.

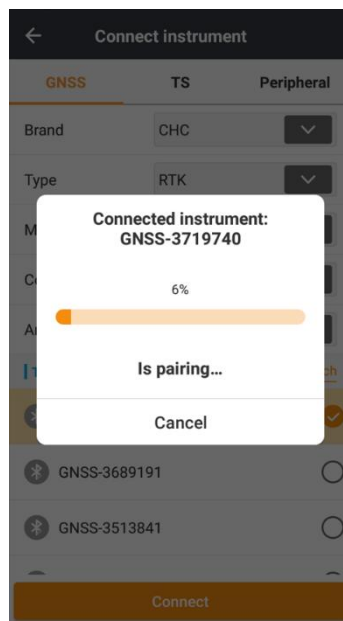

2.7 Downloading Logged Data

Data logging involves the collection of GNSS measurement data over a period at a static point or points, and subsequent post-processing of the information to accurately compute baseline information. Data logging using receivers requires access to suitable GNSS post-processing software such as the CHC Geomatics Office (CGO) Software.

2.7.1 USB Download


The procedures of downloading logged data in the receiver are as follows:

(1) Switch on the receiver and connect it with a computer by HCE600 Type-C. After the successful connection, a removable disk named as the Serial Number (SN)

of the receiver will appear on the computer.




(2) Double click the removable disk and you will see the folder named as “repo”.




(3) Double click this folder, you will see 2 folders. The “push_log” folder is used to save the log files, and the “record_1” folders are used for store static data.




(4) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the i76 system automatically and named by the date which is decided by GPS time when you start to log data.

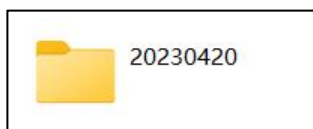

(5) Select the destination folder and double click it, and then two folders named as different data format (hcn and rinex) will be displayed.

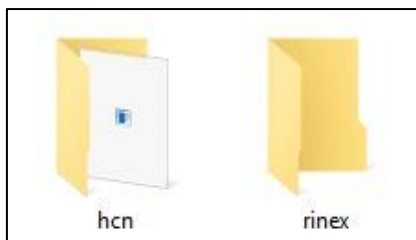

(6) Select the data format that you have configured to save the static data, you will find the static raw data.



Tip - For HCN files, the name of the file is represented as XXXXXXXD DD NN, where XXXXXXX is the SN of the receiver, D DD is day of year, and NN is the recording session.



WARNING – The static data will be saved in the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.

3. Equipment Setup and Operation

3.1 Base Station Setup


Note:

The receiver with PN number A11356980007070507 is equipped with a TX/RX radio.

The receiver with PN number A11356980005070507 is only equipped with a RX radio.

For good rover operation, the following base station setup guidelines are recommended:

Components:

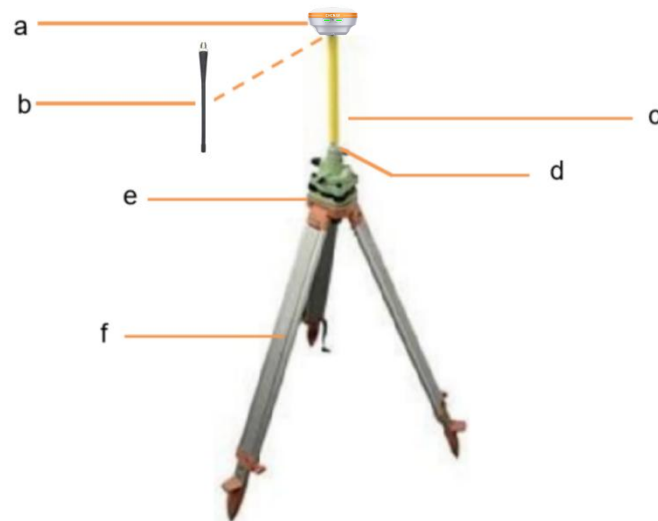

No.	Name
a	I76 GNSS receiver
b	SMA Whip Antenna
c	Extension pole (30 cm)
d	Tribrach adaptor
e	Tribrach w/ Opti
f	Aluminum tripod

Steps:

(1) Put tripod in the target position, center and level it roughly.

(2) Place and lock the tribrach in the tripod.

If work as a UHF base station, the SMA Whip Antenna need to be connected to the receiver.

(3) Connect the receiver to external battery by using external power cable if necessary.

(4) Connect the receiver to external storage disk by using USB cable if necessary.

(5) Turn on the receiver by pressing the power button for 3 s.

(6) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.

(7) Switch on the data controller and connect it to the receiver.

(8) Use software to configure the receiver as UHF base mode.

3.2 Rover Station Setup

For good performance, the following rover station setup guidelines are recommended:

Components:



No.	Name
a	i76 GNSS receiver
b	2M range pole w/bag

Note –Keep the receiver fully charged.

If work as a UHF rover station, the SMA Whip Antenna need to be connected to the receiver.

(1) Turn on the receiver by pressing the power button for 3 s.

(2) Switch on the data controller and connect it to the receiver.

(3) Use software to configure the receiver as cellular rover or UHF rover mode.


(4) Use software to start survey.


3.3 Working with the Tilt Compensation

The Auto-IMU need to be calibrated at the first time when users get a new i76 GNSS receiver. After initializing the sensor successfully, the i76 GNSS receiver will record the calibration parameters, and the user do not need to calibrate it manually any more.


After enable the tilt survey, the i76 IMU can be ready after a few steps walk or a bit movement automatically.


3.3.1 Operation Steps for first IMU initialization

(1) Open LandStar-> Tap Survey-> Tap  to activate tilt measurement.

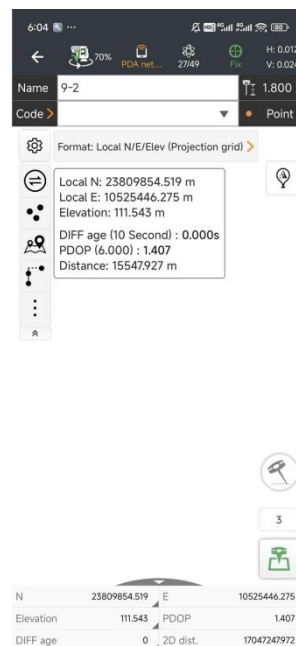

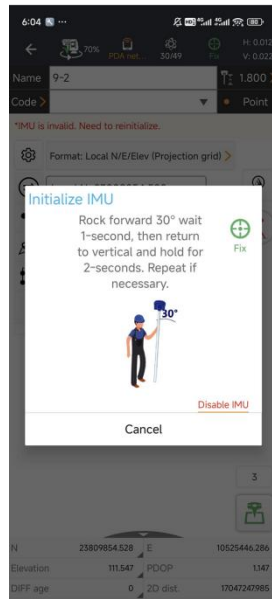


(2) Hold the pole vertical for a while and shake according to the procedures in the interface to do initialization.




- (3) This icon  will appear when the initialization is successful.



- (4) Enter the Name and Antenna, then tap , point will be collected and store to Points automatically.
- (5) When this icon  appears, the text will show “Tilt is not available, please measure in alignment” at the bottom of interface.

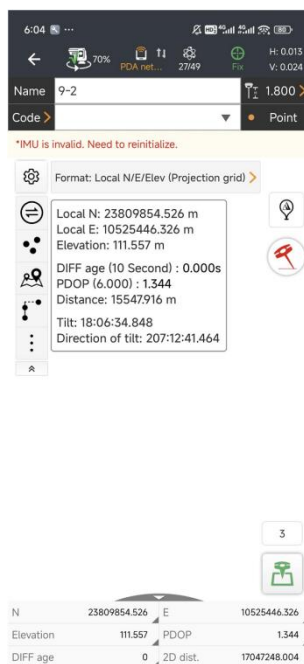

(6) Tap  to close tilt compensation.

3.3.2 Notes of using tilt measurement

(1) At the beginning of initialization, the pole height of the instrument should be the same as that antenna height in the software.

(2) In the process of tilt measurement, if the controller shows that “Tilt is not available, please measure in alignment” (red), please shake RTK slightly from left to right or back to front until the reminder disappears.

(3) The controller will prompt “Tilt is not available, please measure in alignment” when the receiver is stationary over 30 seconds or the pole hit the ground toughly.

(4) The pole cannot be shaken when point is collected.

(5) Initialization is required:

- when the RTK is turned on every time;
- when IMU module is turned on every time;
- when receiver drops at working;
- when the pole is tilted more than 65 degree;
- when the receiver is stationary more than 10 minutes;
- when the RTK rotates too fast on the matching pole (2 rounds per second);
- when the pole hit the ground toughly.


4. Configuring Through a Web Browser

Supported browsers:

- (1) Google Chrome
- (2) Microsoft Internet Explorer version 10, or higher

To connect to the receiver through a web browser:

- (1) Turn on the Wi-Fi of the receiver.
- (2) Search the wireless network named as GNSS-XXXXXXX (the SN of your receiver) on your computer, and then establish the connection.
- (3) After the successful connection between your computer and the receiver, enter the IP address (192.168.1.1) of the receiver into the address bar of the web browser on your computer:



1. The web browser prompts you to enter a login account and password:



The default login account for the receiver is:

- Login Account: admin
- Password: password

Note – Tick **remember me** option, and then the browser will remember the Login Account and

Password you entered.

2. Once you log in, the web page appears as follows:




This web page shows the configuration menus on the left of the browser window, and the setting on the right. Each configuration menu contains the related submenus to configure the receiver and monitor receiver performance.

This chapter describes each configuration menu.

To view the web page in another language, select the corresponding language name from the drop down list on the upper right corner of the web page.

Currently, seven languages are available:

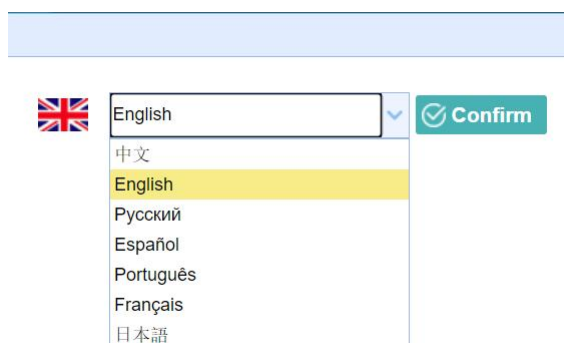


4.1 Status Menu

This menu provides a quick link to review the receiver's position information, satellites tracked, runtime, current data log status, current outputs, available memory, and more.

4.1.1 Position Submenu

This page shows the relevant position information about the receiver's position solution which including the position, DOP values, satellites used and tracked, and the receiver clock information.

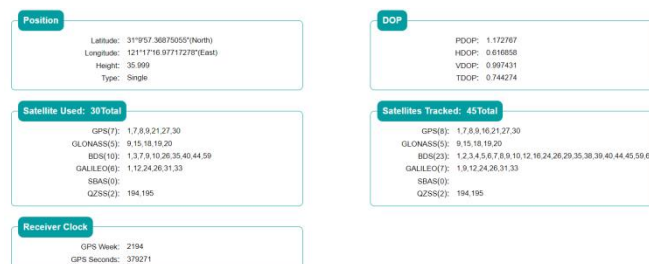

4.1.2 Activity Submenu

Lists several important items to help you understand how the receiver is being used and its current operating condition. Items include the identities of currently tracked satellites, internal and external storage usage rate, how long the receiver has been operational, state of the internal battery, power source state, files being logged, and data streams being output. With this information, it is easy to tell exactly what functions the receiver is performing.

Status

- Position
- Activity**
- Google Map

Activity

Satellites Track: 46Total

GPS(8): 1,7,8,9,16,21,27,30
GLONASS(5): 9,15,18,19,20
BDS(23): 1,2,3,4,5,6,7,8,9,10,12,16,24,26,29,35,38,39,40,44,45,59,60
GALILEO(7): 1,9,12,24,26,31,33
SBAS(0):
QZSS(3): 193,194,195

Activity Status

Current Time: 2022-01-27 09:21:39 (UTC)
Operation Duration: 00-00-00 01:20:50
Internal Storage:

4.85%

 368MB/7595MB
External Storage:

0%


 Disconnected
External Power: Disconnected
Battery:

46%

	Type	Description	Output
1	RTK Client	211.144.118.5,2182	---
2	TCP/UDP_Client1NTRIP Server1	192.168.3.18.9900	---
3	TCP/UDP_Client2NTRIP Server2	192.168.3.18.9901	---
4	TCP/UDP_Client3NTRIP Server3	192.168.3.18.9902	---
5	TCP/UDP_Client4NTRIP Server4	192.168.3.18.9903	---
6	TCP/UDP_Client5NTRIP Server5	192.168.3.18.9904	---
7	TCP/UDP_Client6NTRIP Server6	192.168.3.18.9905	---
8	TCP ServerNTRIP Caster1	9901	---
9	TCP ServerNTRIP Caster2	9902	---
10	TCP ServerNTRIP Caster3	9903	---
11	TCP ServerNTRIP Caster4	9904	---
12	Serial Port	9600	---
13	Bluetooth	GNSS-3200193	---
14	Radio	460.0500MHz	---

4.1.3 Google Map Submenu

Tap this submenu to show the location of the receiver on Google map.

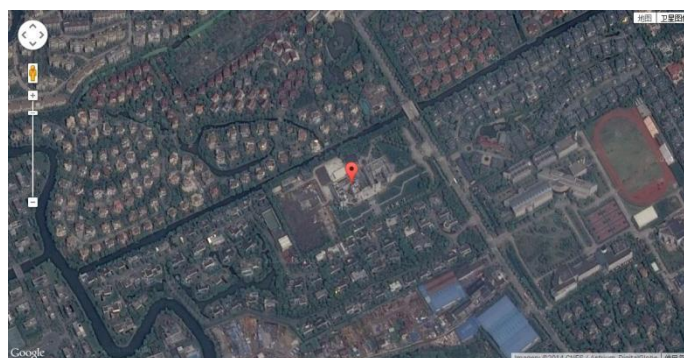

4.2 Satellites Menu

Use the Satellites menu to view satellite tracking details and enable/disable GPS, GLONASS, BDS and Galileo constellations. These menus include tabular and graphical displays to provide all required information on satellite tracking status.



4.2.1 Tracking Table Submenu

Provides the status of satellites tracked in general, such as the satellite ID, satellite type, attitude angle, azimuth angle, L1 SNR, L2 SNR, L5 SNR and enable/disable status of each one.

Tracking Table x									
All <input checked="" type="radio"/> GPS <input type="radio"/> GLONASS <input type="radio"/> BDS <input type="radio"/> GALILEO <input type="radio"/> SBAS <input type="radio"/> QZSS <input type="radio"/>									
SV	Type	Elevation Angle	Azimuth Angle	L1 SNR	L2 SNR	L5 SNR	B1C SNR	B2A SNR	Enabled
3	GPS	21	282	40.000	40.850	30.880	0.000	0.000	Yes
4	GPS	15	318	40.030	36.800	27.800	0.000	0.000	Yes
16	GPS	45	242	44.820	39.450	0.000	0.000	0.000	Yes
26	GPS	74	318	48.720	43.430	36.160	0.000	0.000	Yes
27	GPS	12	188	34.690	35.890	26.250	0.000	0.000	Yes
29	GPS	23	50	41.370	36.580	0.000	0.000	0.000	Yes
31	GPS	55	44	45.450	41.970	0.000	0.000	0.000	Yes
32	GPS	35	149	42.840	38.490	30.140	0.000	0.000	Yes
1	GLONASS	52	211	41.760	46.170	0.000	0.000	0.000	Yes
2	GLONASS	40	313	47.100	46.320	0.000	0.000	0.000	Yes
8	GLONASS	14	174	36.530	43.730	0.000	0.000	0.000	Yes
12	GLONASS	41	300	45.760	49.200	0.000	0.000	0.000	Yes
21	GLONASS	22	94	37.800	44.160	0.000	0.000	0.000	Yes
1	BDS	45	140	39.830	42.710	44.970	0.000	0.000	No
2	BDS	35	235	35.420	43.410	42.250	0.000	0.000	No
3	BDS	50	199	40.270	44.410	43.470	0.000	0.000	Yes


4.2.2 Tracking Info. Table Submenu

The following figure is an example of satellite track diagram page. Users can determine the satellite types and the corresponding SNR of L-band carriers to be displayed in any combination.



4.2.3 Tracking Skyplot Submenu

The following figure is an example of Skyplot page.

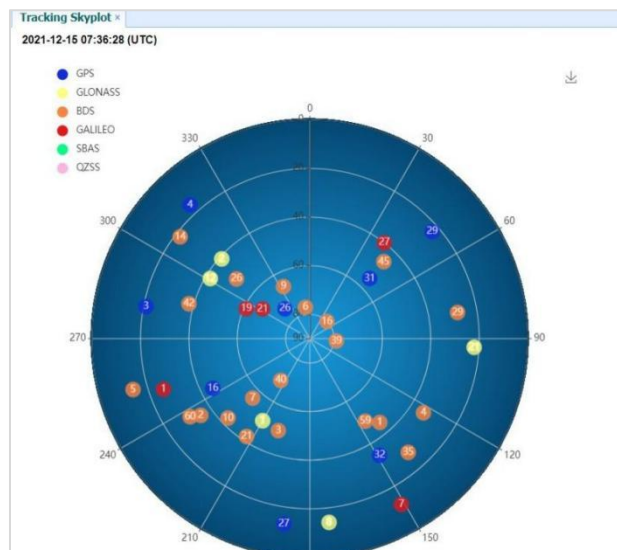


4.2.4 Satellite Activation Submenu

Use this menu to enable or disable satellites.


Satellite Activation			
GPS GLONASS BDS GALILEO QZSS SBAS			
Enable All Disable All			
Satellite Id	Enable	Satellite Id	Enable
1	<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>	4	<input checked="" type="checkbox"/>
5	<input checked="" type="checkbox"/>	6	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>	8	<input checked="" type="checkbox"/>
9	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>
11	<input checked="" type="checkbox"/>	12	<input checked="" type="checkbox"/>
13	<input checked="" type="checkbox"/>	14	<input checked="" type="checkbox"/>
15	<input checked="" type="checkbox"/>	16	<input checked="" type="checkbox"/>
17	<input checked="" type="checkbox"/>	18	<input checked="" type="checkbox"/>
19	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>
21	<input checked="" type="checkbox"/>	22	<input checked="" type="checkbox"/>
23	<input checked="" type="checkbox"/>	24	<input checked="" type="checkbox"/>
25	<input checked="" type="checkbox"/>	26	<input checked="" type="checkbox"/>
27	<input checked="" type="checkbox"/>	28	<input checked="" type="checkbox"/>

4.3 Receiver Configuration Menu

Use this menu to configure settings such as the antenna type and height, elevation mask and PDOP setting, the reference station coordinates, receiver resetting and web interface language:

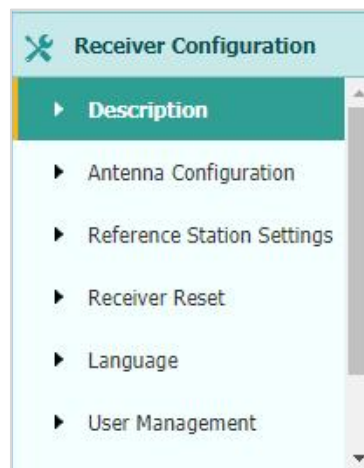

4.3.1 Description

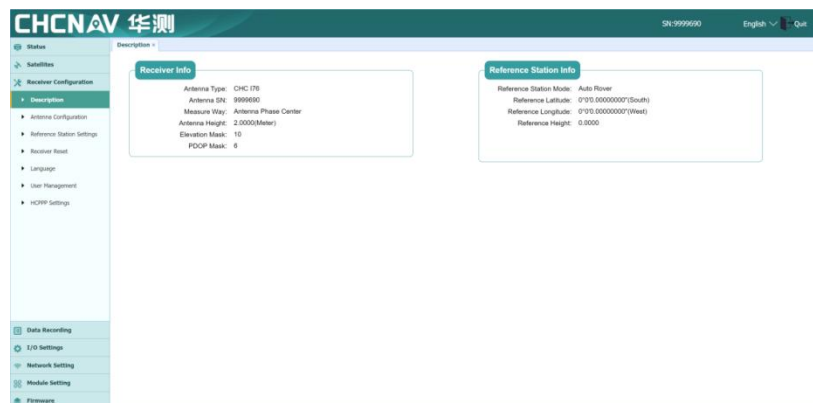

This submenu shows the receiver information and reference station information, including antenna related information, elevation mask angle, reference station work mode and position, etc.

4.3.2 Antenna Configuration Submenu

Use this screen to configure all the items related to the GNSS antenna. You must enter the correct values for all antenna-related fields, because the choices you make affect the accuracy for logged data and broadcast correction data significantly:

4.3.3 Reference Station Settings Submenu

Use this screen to configure settings such as the station coordinates and the broadcast station identifiers. You must enter accurate information in these fields, as this data affects the accuracy of logged data files and broadcast correction data significantly:

For Reference Station Mode, there are three modes available:

(1) **Auto Rover:** The receiver will serve as a rover after this mode is enabled, and then receive correction data through the working mode set last time.

(2) **Auto Base:** The receiver will serve as a base after this mode is enabled, and then broadcast correction data based on coordinate inputted by user or obtained

through autonomous positioning automatically.

(3) **Manual Base:** The receiver will serve neither as a base nor a rover after this mode is enabled. Users need to configure the receiver manually.

For Reference Latitude and Reference Longitude:


There are mainly three methods to enter the reference coordinates and shown as follows:

- (1) **Acquire Current Position:** Click this button to acquire current position obtained through autonomous positioning automatically.
- (2) **Manual Input:** Manually input the coordinate of a control point.
- (3) **From CORS:** After the receiver logging in CORS, the software can record the coordinate of current position based on fix solution.

For **Sample for Average**:

Users can determine the positioning limit and sampling amount. The positioning limit falls into two types:


- (1) **Single Solution Coordinates:** Collect the coordinates of receiver obtained through autonomous positioning.
- (2) **Fixed Solution Coordinates:** Only collect coordinates of receiver with a fixed solution.

After the configuration of positioning limit and sampling amount, click  to carry out sampling and averaging → the progress bar will show the progress → the result will be served as the coordinate of current position.





If users need to save the changes, please tap  button.

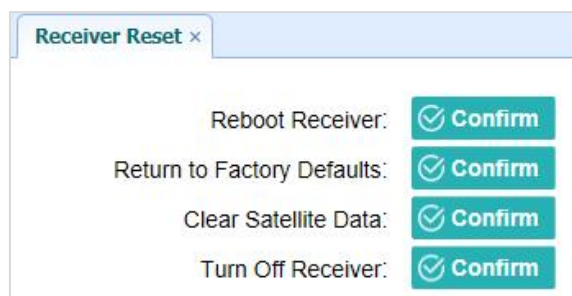4.3.4 Receiver Reset Submenu

Use this screen to completely or partially reset the receiver:



The screenshot shows the 'Receiver Reset' submenu with four options, each with a 'Confirm' button:

- Reboot Receiver: 
- Return to Factory Defaults: 
- Clear Satellite Data: 
- Turn Off Receiver: 

4.3.5 Languages Submenu


Use this screen to select the web interface language:



The screenshot shows the 'Language' submenu with a dropdown menu and a 'Confirm' button. The dropdown menu is open, showing the following options:

- English (selected)
- 中文
- Русский
- Español
- Português
- Français
- 日本語

4.3.6 User Management Submenu

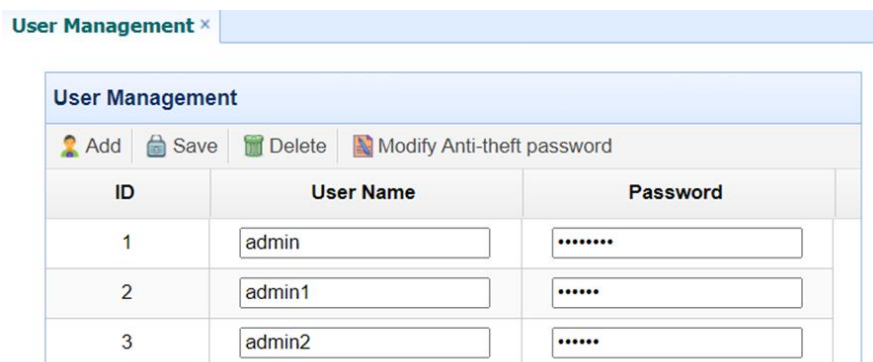


The screenshot shows the 'User Management' submenu with a table of users and a toolbar with icons for Add, Save, Delete, and Modify Anti-theft password.

ID	User Name	Password
1	admin	*****
2	admin1	*****
3	admin2	*****

4.4 Data Recording Menu

Use the Data Logging menu to set up the receiver to log static GNSS data and to view

the logging settings. You can configure settings such as observable rate, recording rate, continuous logging limit, and whether to auto delete old files when memory is low. This menu also provides the controls for the FTP push feature:

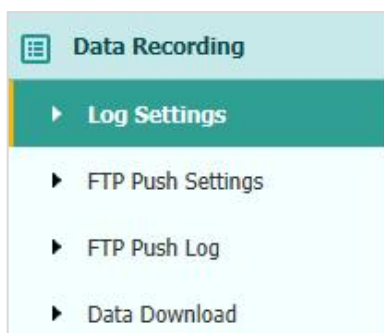

4.4.1 Log Settings Submenu

Here shows the data logging status, including internal and external storage usage and data logging status of each session. Also, users can configure the data logging settings for each session, including recording name, store location, storage limit, store formats, start time, etc.

Log Settings							
Store Info							
	Position	Total Storage	Storage Available				
1	Internal Storage	6425MB	6425MB				
2	External Storage	0MB	0MB				

Attention: Total assigned storage size should be less than 8GB. It will stop recording when the storage is full.



Record Info							
Recording Number	File Name	Activated	Log Status	Setting Parameter	Switch	Clear Data	
1	record1	No	Not Recording	Modify Detail	ON OFF	Clear	Clear All

To edit the settings of each session, click the **Modify** button to the right of the required session, and then the Recording Edit screen appears:

Click advanced to see more settings.

In this screen, you can configure all the data logging parameters, and determine whether the recording files will be affected by the FTP Push. The parameters are mainly as follows:

- **Auto Record:** on or off.
- **Sample Interval:** Select the observable rate from the drop down list.
- **Elevation Mask:** Enter the elevation mask.
- **Duration Time:** Set the duration of data logging.
- **Site Name:** Enter the name of the site.
- **Antenna Height:** the measured height value.
- **Measure way:** Antenna Phase Center, Vertical Height, Slant Height
- **Storage Format:** Select the format of the data store.
- **RINEX Version:** OFF, 3.02, 2.11
- **Start Date:** Select **Yes** or **No** option to determine whether to auto record start date.
- **Apply Time:** Select **Yes** or **No** option to determine whether to auto record apply time.
- **Integral Point Store:** Select **Yes** or **No** option to determine whether to allow receiver to save data every hour.
- **Circulating Memory:** Select **Yes** or **No** option to determine whether to auto delete old files if the storage space is full.
- **Repeat Observations:** Select **Yes** or **No** option to determine whether to turn on to record a single observation.
- **Store Location:** Internal Storage, External Storage.
- **Assigned Storage:** The assigned memory size of current thread(for example, Record 1) is 10000MB
- **Observer:** Enter the name of observer.
- **Observer Agency:** Enter the name of observer agency.
- **FTP Push:** Decide whether to push the stored files to the FTP server of your choice.

Tap  **Save** button to save the settings and back to the Log Settings screen. Also, users can click  **Back** to abandon the changed settings and back to Log Settings screen.

Note – To modify data logging parameters, make sure the data logging session is switched off.

To switch **on** or **off ANY** data logging session, tap the **ON** or **OFF** button on the right of the required session.

To delete the recorded files of **ANY** data logging session, tap the Clear button on the right of the required session.

To delete the recorded files of **ALL** data logging sessions, tap the **Clear ALL Accounts** button.

4.4.2 FTP Push Settings Submenu

Use this screen to configure the receiver to push stored files to the FTP server of your choice. Only files that are configured to use FTP push are transmitted.

FTP Push Settings x				
Record Info				
Server ID	Server IP	Remote Directory	Server Description	Modify
1	192.168.3.72	/repo/first	ftp server 1	Modify
2	192.168.3.72	/repo/second	ftp server 2	Modify
3	192.168.3.72	/repo/third	ftp server 3	Modify

Tap **Modify** button on the right of the required FTP server and the *FTP Push Settings* screen appears:

FTP Push Settings

Server IP: 192.168.3.72

Port: 21

Remote Directory: /repo/first

Local directory: /mnt/repo_3225804

Server Description: ftp server 1

User Name: ftpuser1

Password:

Save

Back

4.4.3 FTP Push Log Submenu

Shows the related information about the recorded file that be pushed. And users can tap **Clear Ftp Send Log** button in the upper right corner to clear the log of FTP Push operations.

FTP Push Log x				
Record Info				
				Clear FTP Push Log
Server ID	Push File	File Size	Push Time	Push Successful Or Not
20				
Page 1 of 1				
Displaying 0 to 0 of 0 items				

4.4.4 Data Download Submenu

In this submenu, users can download the data files that recorded in the internal storage through the internal FTP site. Please note that Chrome, EDGE and Firefox version higher than year 2020 version remove the FTP support through the browser.

(1)Click this submenu, and then the log on dialogue box will prompt you to enter a user name and password:

Sign in
ftp://192.168.1.1
Your connection to this site is not private
Username
Password

Sign in
Cancel




The default logon account for the internal FTP site is:

- User name: ftp
- Password: ftp

(2)Click the directory named as “repo” to view and download the files currently stored on the receiver:

Index of /		
Name	Size	Date Modified
 System Volume Information/		8/9/19, 10:28:00 PM
 repo_3225804/		7/16/19, 1:17:00 PM

(3)To find the file need to be downloaded, click the name of data logging session → the date of file that be recorded → the format of the file → the name of the target file.

Index of /repo_3225804/		
 [parent directory]		
Name	Size	Date Modified
 push_log/		7/16/19, 1:17:00 PM
 record_1/		8/15/19, 10:22:00 AM

(4)To download a file, left click the name of the target file → download the file according to the prompts.

4.5 IO Settings Menu



Use the IO Settings menu to set up all receiver outputs and inputs. The receiver can output CMR, RTCM, Raw data, Ephemeris data, GPGGA, GPGSV, on TCP/IP, UDP, serial port, or Bluetooth ports.


4.5.1 IO Settings Submenu

The following figure shows an example of the screen that appears when you select this submenu.


I/O Settings *						
	Type	Description	Output	Connection Status	Modify	
1	RTK Client	211.144.118.5:2102	---	Unconnected	Connect	Disconnecting De
2	TCP/UDP_Client1/NTRIP Serv	192.168.3.18:9900	---	Unconnected	Connect	Disconnecting De
3	TCP/UDP_Client2/NTRIP Serv	192.168.3.18:9901	---	Unconnected	Connect	Disconnecting De
4	TCP/UDP_Client3/NTRIP Serv	192.168.3.18:9902	---	Unconnected	Connect	Disconnecting De
5	TCP/UDP_Client4/NTRIP Serv	192.168.3.18:9903	---	Unconnected	Connect	Disconnecting De
6	TCP/UDP_Client5/NTRIP Serv	192.168.3.18:9904	---	Unconnected	Connect	Disconnecting De
7	TCP/UDP_Client6/NTRIP Serv	192.168.3.18:9905	---	Unconnected	Connect	Disconnecting De
8	TCP Server/NTRIP Caster1	9901	---	Closed	Connect	Disconnecting De
9	TCP Server/NTRIP Caster2	9902	---	Closed	Connect	Disconnecting De
10	TCP Server/NTRIP Caster3	9903	---	Closed	Connect	Disconnecting De
11	TCP Server/NTRIP Caster4	9904	---	Closed	Connect	Disconnecting De
12	Serial Port	115200	---	---	Settings	
13	Bluetooth	GNSS-3411955	GPBGA:5s,	---	Settings	
14	Radio	462.5500MHz	---	---	Settings	

In this submenu, users can configure 6 types of input and output settings.

(1) RTK Client

After configuring the settings of RTK client, users can log on CORS or APIS. Tap the Connect button to the right → the IO Settings screen will appear → choose one of the connection protocols among the NTRIP, APIS_BASE and APIS_ROVER → configure the related parameters → click  to log on CORS or APIS.

➤ Connection Protocol: NTRIP

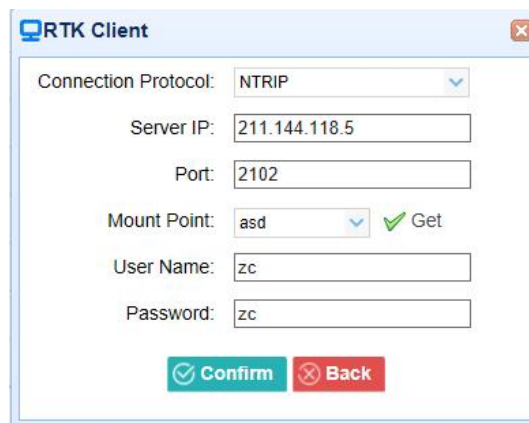


RTK Client

Connection Protocol: NTRIP



Server IP: 211.144.118.5

Port: 2102


Mount Point: asd 

User Name: zc

Password: zc

➤ Connection Protocol: APIS_BASE



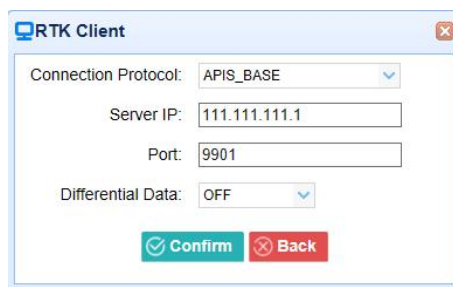

RTK Client

Connection Protocol: APIS_BASE

Server IP: 111.111.111.1

Port: 9901

Differential Data: OFF

➤ Connection Protocol: APIS_ROVER

RTK Client

Connection Protocol: APIS_ROVER

Server IP: 210.14.66.58

Port: 9902

Base ID: 1019923

- Connection Protocol: TCP

RTK Client

Connection Protocol: TCP

Server IP: 201.255.122.215

Port: 9902

(2)TCP/UDP_Client/NTRIP Server

Tap the Connect button on the right of required TCP/UDP Client → the IO Settings screen will appear → select the connection protocol from TCP, UDP, NTRIP1.0 and NTRIP2.0 → enter the IP and Port of the target server → configure messages that you want to output to the target server → click to save and complete the connection.

- Connection Protocol: TCP

TCP/UDP Client

Auto connect: ☐ Connection Protocol: TCP

Server IP: 192.168.3.18

Port: 9901

Differential Data: OFF

Raw Data: OFF

GPGGA: OFF

GPRMC: OFF

GPGST: OFF

GPGSA: OFF

Retransmit: RTK

HCPMP Data: OFF

GPGSV: OFF

GPZDA: OFF

GPVTG: OFF

GPPOS: OFF

- Connection Protocol: UDP

TCP/UDP Client

Auto connect: ☐ Connection Protocol: TCP

Server IP: 192.168.3.18

Port: 9901

Differential Data: OFF

Raw Data: OFF

GPGGA: OFF

GPRMC: OFF

GPGST: OFF

GPGSA: OFF

Retransmit: RTK

HCPMP Data: OFF

GPGSV: OFF

GPZDA: OFF

GPVTG: OFF

GPPOS: OFF

- Connection Protocol: NTRIP1.0

➤ Connection Protocol: NTRIP2.0

(3)TCP Server/NTRIP Caster


Tap the **Connect** button to the right of required TCP Server/NTRIP Caster → the IO Settings screen will appear → select one of the connection protocols between NTRIP and TCP → configure the other related parameters → click to save the settings and open the server.


➤ Connection Protocol: TCP

➤ Connection Protocol: NTRIP


(4)Serial Port


Tap the **Settings** button on the right of Serial Port → the *Serial Port Setup* screen will

appear → select Baud Rate used to transmit data → configure the messages that you want to output through the serial port → click  to save the settings and start to transmit.

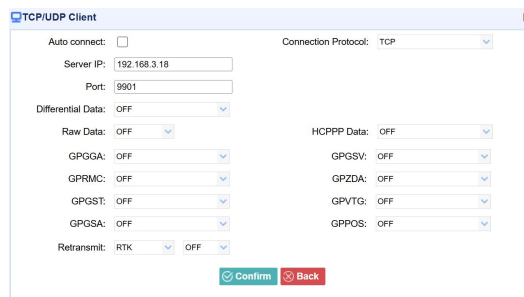


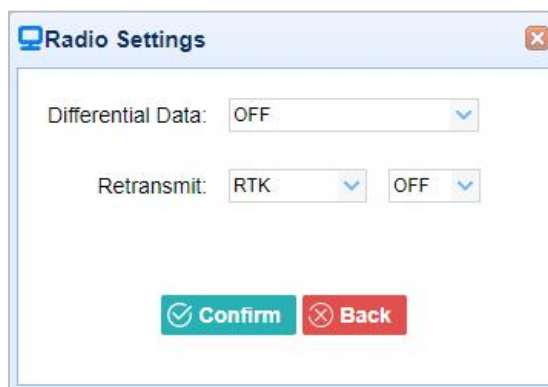
(5)Bluetooth

Tap the Settings button to the right of Bluetooth → the Bluetooth Set screen will appear → configure the messages that you want to transmit through Bluetooth → click  to save the settings and start to transmit.

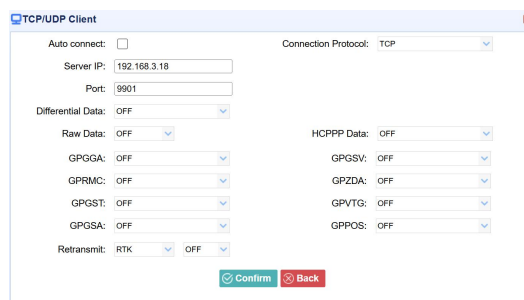


(6)Radio

Tap the Settings button to the right of Radio → the Radio Settings screen will appear → select the format of differential data that you want to transmit through radio from the dropdown list → click  to save the settings and start to transmit.



4.6 Network Setting Menu

Use this menu to set email alert for specific situation, configure HTTP or HTTPS port, and the username and password of internal FTP site:

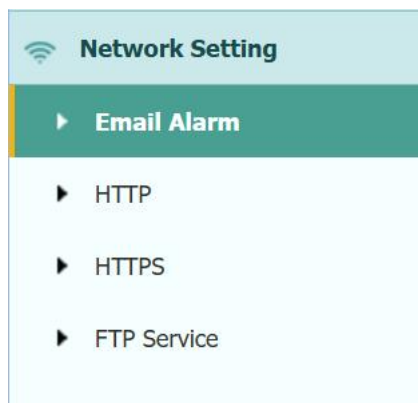

4.6.1 Email Alarm Submenu

Use this submenu to choose which situation of receiver will be alerted and input the email address.

The 'Email Alarm' configuration form is divided into three sections: 'TO', 'From', and 'Email Alert'. The 'TO' section has three input fields for 'Email Address 1', 'Email Address 2', and 'Email Address 3', all containing 'test@huacnav.com', with a 'Save' button below. The 'From' section has input fields for 'Account', 'Password', and 'Server Address', with a 'Save' button below. The 'Email Alert' section contains five checkboxes for different alert conditions: 'Receiver is powered on', 'External power is off', 'Battery level is low', 'Ftp push is failed', and 'Receiver(license) will be expired in 7 days', with a 'Save' button at the bottom.

4.6.2 HTTP Submenu

Use this submenu to configure HTTP port.

The 'HTTP' configuration form shows a single input field for 'HTTP Port' with the value '80' and a 'Save' button next to it.

4.6.3 HTTPS Submenu

Use this submenu to configure HTTPS port.

HTTPS x

HTTPS

Enable HTTPS: ☒ Yes ☐ No

HTTPS Port:

Save

4.6.4 FTP Service Submenu

Use this submenu to configure the user name and password of internal FTP site.

FTP Service x

FTP Service

User Name:

Password:

Save

4.7 Module Setting Menu

Use this menu to check module information, configure WiFi, Bluetooth, radio related settings, turn on/off static voice of buzzer, and setting IMU:

Module Setting
Description
<ul style="list-style-type: none"> WiFi Bluetooth Settings Radio Settings IMU Setting

4.7.1 Description Submenu

Use this submenu to check the information of WiFi module, Bluetooth module and radio module.

Description ×

Wi-Fi Information

Power Status: ON
Wifi Mode: Access Point
MAC: 82:5b:10:07:ec:2b
Access Point Details
SSID: GNSS-9999690

Radio Information


Radio Type: Integ
Radio Power: 1W
OTA Baud Rate: 9600
Radio Frequency: 443.000000MHz
Radio Protocol: Transparent
Radio Frequency Channel: Full Range
Frequency Range: 410MHz---470MHz

4.7.2 WiFi Submenu

Use this submenu to turn on/off WiFi function and modify password.

WiFi ×


WiFi

Power Status: ON 

SSID: GNSS-9999690

Encryption Type: NONE

Network frequency bands: 5_8G




4.7.3 Bluetooth Settings Submenu

Use this submenu to turn on/off Bluetooth function and modify PIN number.

Bluetooth Settings ×

Bluetooth Settings

Local Name: GNSS-9999690
MAC Address: 81:5B:10:07:EC:2B
PIN: 1234



4.7.4 Radio Settings Submenu

Use this submenu to turn on/off radio function and configure radio parameters.

Radio Settings x

Radio Settings

Radio Status: ON ON OFF

Auto Start: ☒ Yes ☐ No

Radio Protocol: Transparent

Channel Bandwidth: 12.5 (kHz)

OTA Baud Rate: 4800

Radio Power: 1W

Radio Frequency: 1 456.050000 (410MHz---470MHz)

FEC: ☐

Save

4.7.5 IMU Setting

Use this submenu to turn on/off IMU function and set antenna height.

IMU Setting x

IMU Setting

IMU Status: ☒ ON ☐ OFF

Antenna Height: 2.0

Save

IMU Init Status: IMU init fail, please shake the center bar

Lat: 31°9'34.56599718"(North)

Lon: 121°10'42.49304187"(East)

Alt: 48.354

Vertical dip: 0°28'3.82295453"

direction of dip: 227°9'57.51882360"


4.8 Firmware Menu

Use this menu to check the current firmware information, download the system log, update the receiver firmware, download or update the configuration file and register the receiver, and more:




4.8.1 Firmware Info Submenu

Use this submenu to check the current firmware information. The following figure shows an example of the firmware information.

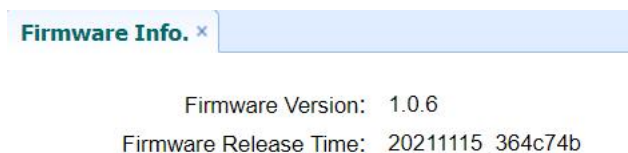

4.8.2 Hardware Version Submenu

Use this submenu to check the hardware information, including main board version and core board version:

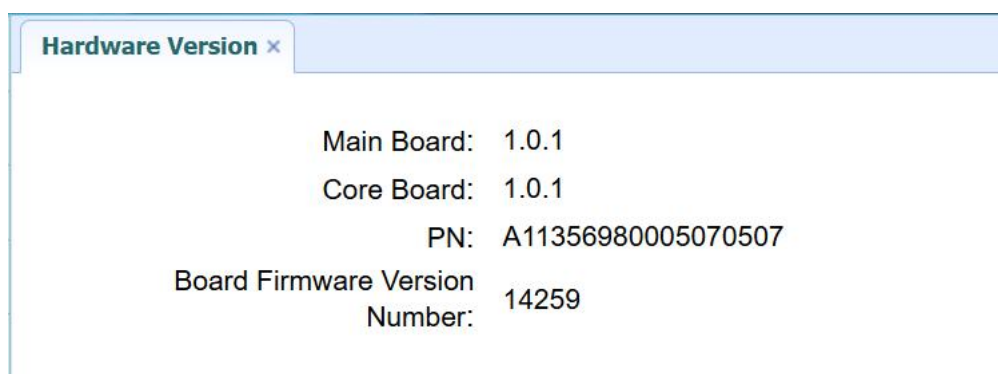

4.8.3 Config File Submenu

Use this submenu to update Configuration File.

Config File x

Download Configuration File : [Download](#)

Update Configuration File: [Browse](#)

[Confirm](#)

4.8.4 System Log Download Submenu

Use this submenu to download the system log of the receiver.

System Log x

System Log Type: Firmware Log

[Download](#)

4.8.5 User Log Submenu

Use this submenu to download the user log. Tap **Download** to download current user log; Tick items that you want to see on the user log and tap confirm button to confirm selected user log.

User Log x

Download User Log: [Download](#)

User Log settings

<input checked="" type="checkbox"/> System Starting Time	<input checked="" type="checkbox"/> Wi-Fi Status
<input checked="" type="checkbox"/> External Power Removed	<input checked="" type="checkbox"/> Bluetooth status
<input checked="" type="checkbox"/> Satellites Tracking Status Changed	<input checked="" type="checkbox"/> CORS and APIS states
<input checked="" type="checkbox"/> TCP Client Connection	<input checked="" type="checkbox"/> 3g Connection status
<input checked="" type="checkbox"/> TCP Client Disconnect	
<input checked="" type="checkbox"/> Observation Recording Start and End	
<input checked="" type="checkbox"/> FTP file pushed	
<input checked="" type="checkbox"/> Email alert time	

[Confirm](#)

4.8.6 Firmware Update Submenu

Use this submenu to load new firmware to the receiver across the network. Tap the Browse button to locate the upgrade file → tap Confirm button to confirm the selected

upgrading file and start upgrading.




Notes-

It may take about 3 or 4 minutes to complete the firmware upgrading. Do not touch the power button or unplug the power until the upgrading process finishes, or damage will be caused to the receiver.

The receiver will restart after the firmware upgrading is done, so users need to reconnect the receiver with your computer via Wi-Fi, and then log-in the receiver through a web browser to continue the configuration.


4.8.7 GNSS Board Upgrade Submenu

Use this submenu to upgrade GNSS Board. Use this submenu to load new board to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

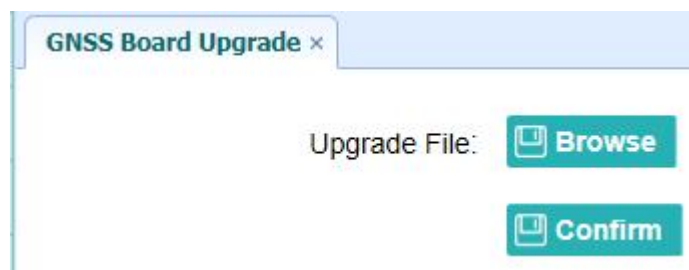

4.8.8 GNSS Registration Submenu

Use this submenu to register the receiver. Paste or enter the registration code to the *Registration Code* field → tap **Registration** button to complete the registration.

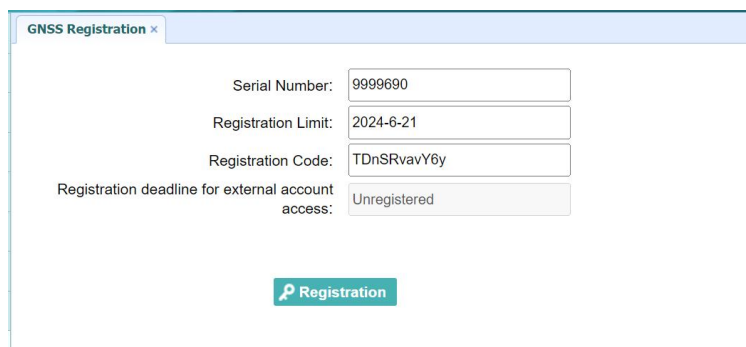



CHC Navigation

Building C, 577 Songying Road, Qingpu, District,
201703 Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963

Email: sales@chcnav.com | support@chcnav.com

Skype: chc_support

Website: www.chcnav.com

This document is intended for general information purposes only. It does not consider the reader's specific circumstances and environmental constraints of use of GNSS.

Make your work more efficient